



**AQUAZONE™**  
**50PSW036-360**  
**Water-to-Water Source Heat Pump**  
**with PURON® Refrigerant (R-410A)**

# Installation, Start-Up, and Service Instructions

## CONTENTS

	Page		Page
<b>SAFETY CONSIDERATIONS</b>	1,2	<b>Test Mode</b>	20
<b>GENERAL</b>	2	<b>Retry Mode</b>	21
<b>INSTALLATION</b>	2-16	<b>Aquazone Deluxe D Control LED Indicators</b>	21
<b>Step 1 — Check Jobsite</b>	2	<b>SERVICE</b>	21,22
<b>Step 2 — Check Unit</b>	2	<b>Water Coil</b>	21
• STORAGE		<b>Refrigerant System</b>	21
• PROTECTION		<b>Condenser Cleaning</b>	21
• INSPECT UNIT		<b>Checking System Charge</b>	22
<b>Step 3 — Locate Unit</b>	4	<b>Refrigerant Charging</b>	22
<b>Step 4 — Mount Unit</b>	4	<b>Air Coil Fan Motor Removal</b>	22
<b>Step 5 — Connect Piping</b>	5	<b>TROUBLESHOOTING</b>	22-24
• WATER SUPPLY AND QUALITY		<b>50PSW START-UP CHECKLIST</b>	CL-1,CL-2
• WATER LOOP APPLICATIONS			
• GROUND-WATER APPLICATIONS			
• GROUND-LOOP APPLICATIONS			
• UNIT LOAD PIPING			
<b>Step 6 — Wire Electrical Connections</b>	7		
• POWER CONNECTION			
• SUPPLY VOLTAGE			
• EXTERNAL LOOP POWER CONNECTION			
• 208-V OPERATION			
• 460-V OPERATION			
<b>Step 7 — Wire Low Voltage Connections</b>	15		
• THERMOSTAT CONNECTIONS			
• WATER FREEZE PROTECTION			
• ACCESSORY CONNECTIONS			
• WATER SOLENOID VALVES			
<b>PRE-START-UP</b>	16		
<b>System Checkout</b>	16		
<b>FIELD SELECTABLE INPUTS</b>	16,17		
<b>Complete C Control Jumper Settings</b>	16		
<b>Complete C Control DIP Switches</b>	16		
<b>Deluxe D Control Jumper Settings</b>	16		
<b>Deluxe D Control DIP Switches</b>	16		
<b>Deluxe D Control Accessory Relay</b>			
<b>Configurations</b>	17		
<b>START-UP</b>	17-19		
<b>Operating Limits</b>	17		
<b>Unit Start-Up</b>	17		
<b>Scroll Compressor Rotation</b>	17		
<b>Flow Regulation</b>	18		
<b>Cleaning and Flushing</b>	18		
<b>Antifreeze</b>	18		
<b>Cooling Tower/Boiler Systems</b>	19		
<b>Ground Coupled, Closed Loop and Plateframe</b>			
<b>Heat Exchanger Well Systems</b>	19		
<b>OPERATION</b>	19,20		
<b>Power Up Mode</b>	19		
<b>Units with Aquazone Complete C Control</b>	19		
<b>Units with Aquazone Deluxe D Control</b>	19		
<b>SYSTEM TEST</b>	20,21		

**IMPORTANT:** Read the entire instruction manual before starting installation.

## SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.


Untrained personnel can perform basic maintenance functions of cleaning coils and filters and replacing filters. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloth for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions attached to the unit. Consult local building codes and the National Electrical Code (NEC) for special installation requirements.

Understand the signal words — DANGER, WARNING, and CAUTION. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards that could result in personal injury or death. CAUTION is used to identify unsafe practices, which would result in minor personal injury or product and property damage.



Recognize safety information. This is the safety alert symbol () . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

### **WARNING**

Electrical shock can cause personal injury or death. Before installing or servicing system, always turn off main power to system. There may be more than one disconnect switch. Turn off accessory heater power if applicable. Install lock-out tag.

## **GENERAL**

The Aquazone™ 50PSW water source heat pump (WSHP) is a single-package vertically mounted unit with electronic controls designed for year-round cooling and heating.

**IMPORTANT:** The installation of water source heat pump units and all associated components, parts, and accessories which make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.

## **INSTALLATION**

**Step 1 — Check Jobsite** — Installation, operation and maintenance instructions are provided with each unit. Before unit start-up, read all manuals and become familiar with the unit and its operation. Thoroughly check out the system before operation. Complete the inspections and instructions listed below to prepare a unit for installation. See Table 1 for unit physical data.

Units are designed for indoor installation only. Be sure to allow adequate space around the unit for servicing. See Fig. 1 and 2 for overall unit dimensions.

### **CAUTION**

To avoid equipment damage, do not use these units as a source of heating or cooling during the construction process. The mechanical components used in these units can quickly become clogged with construction dirt and debris which may cause system damage.

**Step 2 — Check Unit** — Upon receipt of shipment at the jobsite, carefully check the shipment against the bill of lading. Make sure all units have been received. Inspect the carton or crating of each unit, and inspect each unit for damage. Ensure the shipping company makes proper notation of any shortages or damage on all copies of the freight bill. Concealed damage not discovered during unloading must be reported to the shipping company within 15 days of receipt of shipment.

**NOTE: It is the responsibility of the purchaser to file all necessary claims with the shipping company.**

1. Verify unit is correct model for entering water temperature of job.
2. Be sure the location chosen for unit installation provides ambient temperatures maintained above freezing. Well water applications are especially susceptible to freezing.
3. Be sure the installation location is isolated from sleeping areas, private offices and other acoustically sensitive spaces.  
**NOTE:** A sound control accessory package may be used to help eliminate sound in sensitive spaces.
4. Provide sufficient access to allow maintenance and servicing of the compressor and coils.
5. Provide an unobstructed path to the unit within the closet or mechanical room. Space should be sufficient to allow removal of unit if necessary.
6. Provide ready access to water valves and fittings, and screwdriver access to unit side panels.
7. Where access to side panels is limited, pre-removal of the control box side mounting screws may be necessary for future servicing.

**STORAGE** — If the equipment is not needed for immediate installation upon its arrival at the jobsite, it should be left in its shipping carton and stored in a clean, dry area of the building or in a warehouse. Units must be stored in an upright position at all times. If carton stacking is necessary, stack units a maximum of 3 cartons high. Do not remove any equipment from its shipping package until it is needed for installation.

**Table 1 — 50PSW Unit Physical Data**

50PSW UNIT SIZE	036	060	120	180	360
<b>NOMINAL CAPACITY (tons)</b>	3	5	10	14	30
<b>WEIGHT (lb)</b>					
Operating	348	360	726	790	1330
Packaged	373	385	770	800	1340
<b>COMPRESSOR (qty)</b>	Scroll (1)	Scroll (1)	Scroll (2)	Scroll (1)	Scroll (2)
<b>REFRIGERANT TYPE</b>	R-410A				
<b>Factory Charge Per Circuit (lb)</b>	4.5	6.25	6.25	14.9	14.9
<b>CONNECTIONS, IPT (in.)</b>					
Commercial Load/Source	3/4	1	1 1/2	2	
HWG Water In/Out		1 1/2		N/A	


### **LEGEND**

**HWG** — Hot Water Generator  
**IPT** — Internal Pipe Thread  
**TXV** — Thermostatic Expansion Valve


### **NOTES:**

1. Maximum working pressure on the base unit is 500 psig.
2. Units have a dual isolated compressor mounting.
3. Units have a balanced port expansion valve (TXV).
4. Insulated source and load water coils are standard.
5. Insulated refrigerant circuit is standard.
6. Compressor is on (green) light and fault on (red) light.



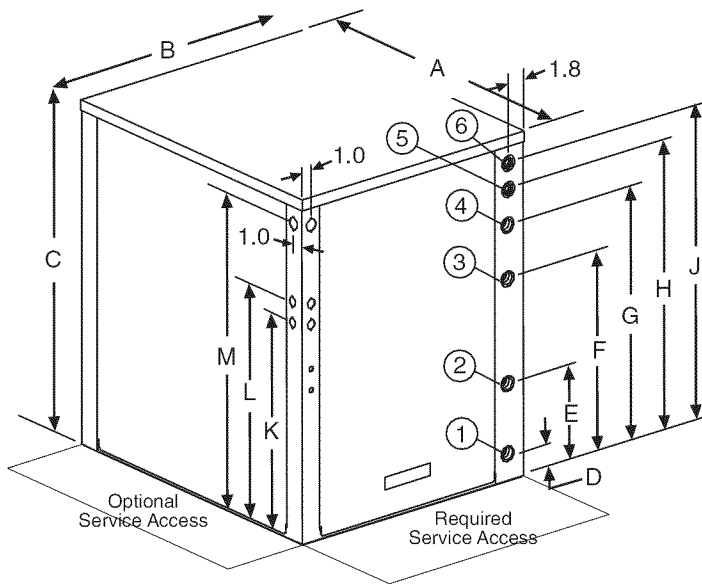

**SIZES 036,060**

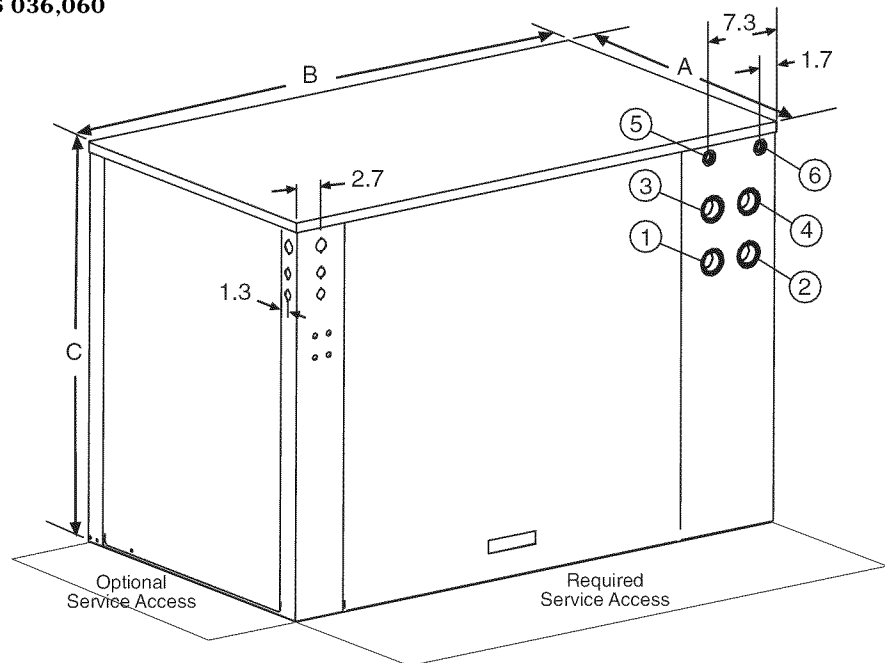

**SIZE 120**

50PSW UNIT SIZE	OVERALL CABINET			WATER CONNECTIONS						ELECTRIC ACCESS PLUGS		
				1	2	3	4	5	6			
				Source (Outdoor)		Load (Indoor)		HWG				
	A Depth	B Width	C Height	D Water In	E Water Out	F Water In	G Water Out	H Return In	J Water Out	K Low Voltage	L External Pump	M Power Supply
036,060	30.6	25.4	33.0	2.70	9.4	19.4	24.5	27.9	30.4	20.9	22.9	30.9
120	30.6	52.9	37.0	25.2	25.2	30.1	30.1	34.9	34.9	29.9	31.9	34.4

**LEGEND**

**HWG** — Hot Water Generator


**HACR** — Heating, Air Conditioning, and Refrigeration

**NOTES:**

1. Dimensions shown inches.
2. HACR circuit breaker in U.S.A. only.

**Fig. 1 — 50PSW036-120 Unit**



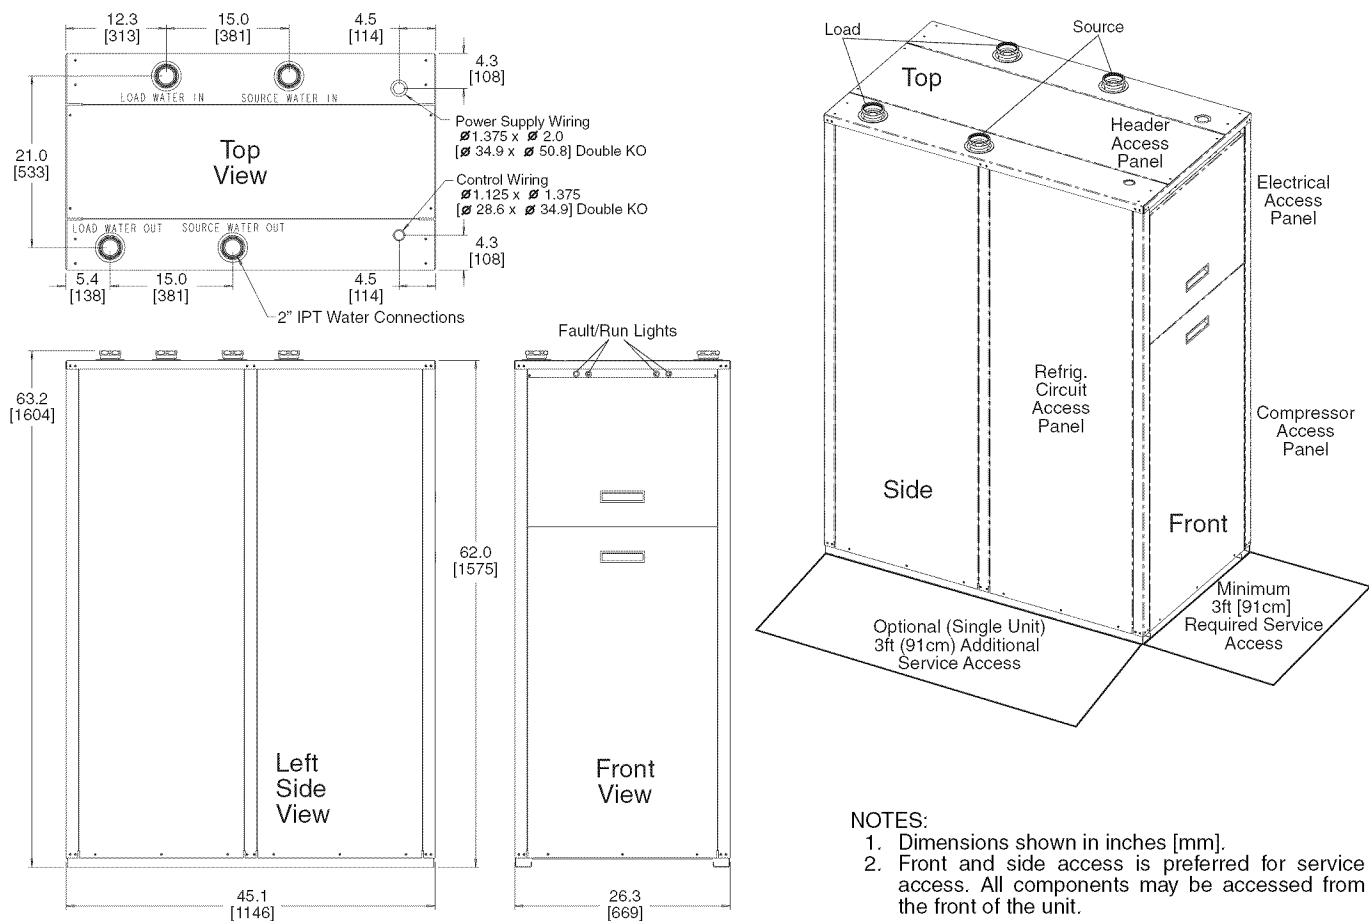

**Fig. 2 — 50PSW180,360 Unit**

**PROTECTION** — Once the units are properly positioned on the jobsite, they must be covered with either a shipping carton, vinyl film, or an equivalent protective covering. Open ends of pipes stored on the jobsite must be capped. This precaution is especially important in areas where painting, plastering, or spraying of fireproof material, etc., is not yet complete. Foreign material that is allowed to accumulate within the units can prevent proper start-up and necessitate costly clean-up operations.

Before installing any of the system components, be sure to examine each pipe, fitting, and valve, and remove any dirt or foreign material found in or on these components.

**CAUTION**

DO NOT store or install units in corrosive environments or in locations subject to temperature or humidity extremes (e.g., attics, garages, rooftops, etc.). Corrosive conditions and high temperature or humidity can significantly reduce performance, reliability, and service life. Always move units in an upright position. Tilting units on their sides may cause equipment damage.

**INSPECT UNIT** — To prepare the unit for installation, complete the procedures listed below:

1. Compare the electrical data on the unit nameplate with ordering and shipping information to verify that the correct unit has been shipped.
2. Verify that the unit is the correct model for the entering water temperature of the job.


3. Wait to remove the packaging until the unit is ready for installation.
4. Verify that the refrigerant tubing is free of kinks or dents, and that it does not touch other unit components.
5. Inspect all electrical connections. Be sure connections are clean and tight at the terminals.
6. Loosen bolts and remove shipping clamps on compressors equipped with external spring vibration isolators. Compressors are internally spring-mounted.
7. Locate and verify any accessory kit located in compressor section.
8. Remove any access panel screws that may be difficult to remove once unit is installed.

**Step 3 — Locate Unit** — The following guidelines should be considered when choosing a location for the WSHP:

- Units are for indoor use only.
- Provide sufficient space for water and electrical connections.
- Locate unit in an area that allows for easy access and removal of access panels.
- Allow enough space for service personnel to perform maintenance.

**Step 4 — Mount Unit** — Mount unit as shown in Fig. 3. Rod attachments must be able to support the weight of the unit. See Table 1 for unit operating weight.



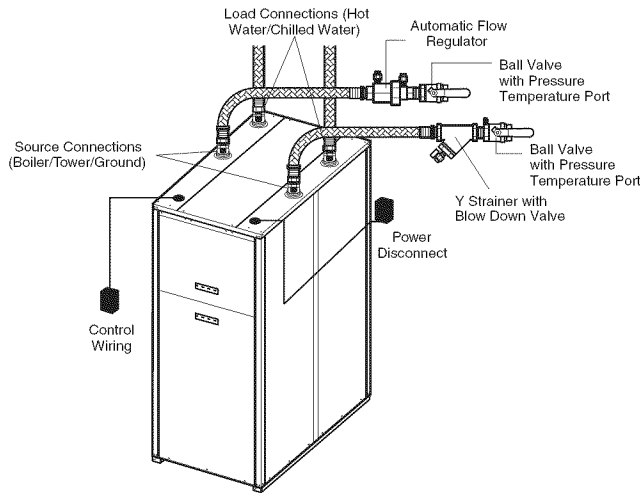

**Fig. 3 — Typical Water Loop System —  
Boiler, Tower, or Ground (Sizes 180,360 Shown)**

**Step 5 — Connect Piping** — Depending on the application, there are 3 types of WSHP piping systems to choose from: water loop, ground-water and ground loop. Refer to the Carrier System Design Manual for additional information.

All WSHP units utilize low temperature soldered female pipe thread fittings for water connections to prevent annealing and out-of-round leak problems which are typically associated with high temperature brazed connections. When making piping connections, consider the following:

- A backup wrench must be used when making screw connections to unit to prevent internal damage to piping.
- Insulation may be required on piping to avoid condensation in the case where fluid in loop piping operates at temperatures below dew point of adjacent air.
- Piping systems that contain steel pipes or fittings may be subject to galvanic corrosion. Dielectric fittings may be used to isolate the steel parts of the system to avoid galvanic corrosion.
- Units may be manifolded together via top water connects to get increased temperatures, when piped in series, or greater capacity, when piped in parallel.

**WATER SUPPLY AND QUALITY** — Check water supply. Water supply should be plentiful and of good quality. See Table 2 for water quality guidelines.

**IMPORTANT:** Failure to comply with the above required water quality and quantity limitations and the closed-system application design requirements may cause damage to the tube-in-tube heat exchanger that is not the responsibility of the manufacturer.

In all applications, the quality of the water circulated through the heat exchanger must fall within the ranges listed in the Water Quality Guidelines table. Consult a local water treatment firm, independent testing facility, or local water authority for specific recommendations to maintain water quality within the published limits.

**WATER LOOP APPLICATIONS** — Water loop applications usually include a number of units plumbed to a common piping system. Maintenance to any of these units can introduce air into the piping system. Therefore, air elimination equipment comprises a major portion of the mechanical room plumbing.

The flow rate is usually set between 2.25 and 3 gpm per ton of cooling capacity. For proper maintenance and servicing, pressure-temperature (P/T) ports are necessary for temperature and flow verification.

In addition to complying with any applicable codes, consider the following for system piping:

- Piping systems utilizing water temperatures below 50 F require 1/2-in. closed cell insulation on all piping surfaces to eliminate condensation.
- All plastic to metal threaded fittings should be avoided due to the potential to leak. Use a flange fitted substitute.
- Teflon\* tape thread sealant is recommended to minimize internal fouling of the heat exchanger.
- Use backup wrench. Do not overtighten connections.
- Route piping to avoid service access areas to unit.
- The piping system should be flushed prior to operation to remove dirt and foreign materials from the system.

**GROUND-WATER APPLICATIONS** — In addition to complying with any applicable codes, consider the following for system piping:

- Install shut-off valves for servicing.
- Install pressure-temperature plugs to measure flow and temperature.
- Boiler drains and other valves should be connected using a "T" connector to allow acid flushing for the heat exchanger.
- Do not overtighten connections.
- Route piping to avoid service access areas to unit.
- Use PVC SCH80 or copper piping material.

**NOTE:** PVC SCH40 should *not* be used due to system high pressure and temperature extremes.

**GROUND-LOOP APPLICATIONS** — Temperatures between 25 and 110 F and a cooling capacity of 2.25 to 3 gpm of flow per ton are recommended. In addition to complying with any applicable codes, consider the following for system piping:

- Piping materials should be limited to only polyethylene fusion in the buried sections of the loop.
- Galvanized or steel fittings should not be used at any time due to corrosion.
- All plastic to metal threaded fittings should be avoided due to the potential to leak. Use a flange fitted substitute.
- Do not overtighten connections.
- Route piping to avoid service access areas to unit.
- Pressure-temperature (P/T) plugs should be used to measure flow of pressure drop.

**UNIT LOAD PIPING** — For applications with wide temperature variation such as heating/cooling coils:

- Use piping materials that are rated for the maximum temperature and pressure combination. This excludes PVC for most heating applications.
- Ensure load water flow in high temperature heating applications is at least 3 gpm per ton to improve performance and reduce nuisance high pressure faults.
- DO NOT employ plastic to metal threaded joints.
- Utilize a pressure tank and air separator vent system to equalize pressure and remove air.
- Employ an 800-micron particulate strainer in both load and source plumbing to protect the plate heat exchanger.

**Swimming Pool Hot Tub Applications** — Load heat exchanger should be isolated with secondary heat exchanger constructed of anti-corrosion material in all chlorine/bromine fluid applications.

#### Potable Water Applications

- Load coax material should always be vented double walled for use in potable water systems.
- Ensure load water flow in high temperature heating applications is at least 3 gpm per ton to improve performance and reduce nuisance high pressure faults.

\*Teflon is a trademark of E. I. du Pont de Nemours and Company.



**Table 2 — Water Quality Guidelines**

CONDITION	HX MATERIAL*	CLOSED RECIRCULATING†	OPEN LOOP AND RECIRCULATING WELL**		
<b>Scaling Potential — Primary Measurement</b>					
Above the given limits, scaling is likely to occur. Scaling indexes should be calculated using the limits below.					
pH/Calcium Hardness Method	All	N/A	pH < 7.5 and Ca Hardness, <100 ppm		
<b>Index Limits for Probable Scaling Situations (Operation outside these limits is not recommended.)</b>					
Scaling indexes should be calculated at 150 F for direct use and HWG applications, and at 90 F for indirect HX use. A monitoring plan should be implemented.					
Ryznar Stability Index	All	N/A	<b>6.0 - 7.5</b> If >7.5 minimize steel pipe use.		
Langelier Saturation Index	All	N/A	<b>-0.5 to +0.5</b> If <-0.5 minimize steel pipe use. Based upon 150 F HWG and direct well, 85 F indirect well HX.		
<b>Iron Fouling</b>					
Iron Fe <sup>2+</sup> (Ferrous) (Bacterial Iron Potential)	All	N/A	<b>&lt;0.2 ppm (Ferrous)</b> If Fe <sup>2+</sup> (ferrous) >0.2 ppm with pH 6 - 8, O <sub>2</sub> <5 ppm check for iron bacteria.		
Iron Fouling	All	N/A	<b>&lt;0.5 ppm of Oxygen</b> Above this level deposition will occur.		
<b>Corrosion Prevention††</b>					
pH	All	6 - 8.5 Monitor/treat as needed.	<b>6 - 8.5</b> Minimize steel pipe below 7 and no open tanks with pH <8.		
Hydrogen Sulfide (H <sub>2</sub> S)	All	N/A	<b>&lt;0.5 ppm</b> At H <sub>2</sub> S>0.2 ppm, avoid use of copper and cupronickel piping of HXs. Rotten egg smell appears at 0.5 ppm level. Copper alloy (bronze or brass) cast components are okay to <0.5 ppm.		
Ammonia Ion as Hydroxide, Chloride, Nitrate and Sulfate Compounds	All	N/A	<b>&lt;0.5 ppm</b>		
Maximum Chloride Levels	Copper Cupronickel 304 SS 316 SS Titanium	N/A N/A N/A N/A N/A	Maximum allowable at maximum water temperature.		
			50 F (10 C)	75 F (24 C)	100 F (38 C)
			<20 ppm <150 ppm <400 ppm <1000 ppm >1000 ppm	NR NR <250 ppm <550 ppm >550 ppm	NR NR <150 ppm <375 ppm >375 ppm
<b>Erosion and Clogging</b>					
Particulate Size and Erosion	All	<10 ppm of particles and a maximum velocity of 6 fps. Filtered for maximum 800 micron size.	<10 ppm (<1 ppm “sandfree” for reinjection) of particles and a maximum velocity of 6 fps. Filtered for maximum 800 micron size. Any particulate that is not removed can potentially clog components.		

**LEGEND**

**HWG**— Hot Water Generator  
**HX** — Heat Exchanger  
**N/A** — Design Limits Not Applicable Considering Recirculating Potable Water  
**NR** — Application Not Recommended  
**SS** — Stainless Steel

\*Heat exchanger materials considered are copper, cupronickel, 304 SS (stainless steel), 316 SS, titanium.

†Closed recirculating system is identified by a closed pressurized piping system.

\*\*Recirculating open wells should observe the open recirculating design considerations.

††If the concentration of these corrosives exceeds the maximum allowable level, then the potential for serious corrosion problems exists.

Sulfides in the water quickly oxidize when exposed to air, requiring that no agitation occur as the sample is taken. Unless tested immediately at the site, the sample will require stabilization with a few drops of one Molar zinc acetate solution, allowing accurate sulfide determination up to 24 hours after sampling. A low pH and high alkalinity cause system problems, even when both values are within ranges shown. The term pH refers to the acidity, basicity, or neutrality of the water supply. Below 7.0, the water is considered to be acidic. Above 7.0, water is considered to be basic. Neutral water contains a pH of 7.0.

To convert ppm to grains per gallon, divide by 17. Hardness in mg/l is equivalent to ppm.



## Step 6 — Wire Electrical Connections

### **⚠ WARNING**

To avoid possible injury or death due to electrical shock, open the power supply disconnect switch and secure it in an open position during installation. Install lockout tag.

### **⚠ CAUTION**

Use only copper conductors for field-installed electrical wiring. Unit terminals are not designed to accept other types of conductors. Failure to heed this warning could result in equipment damage.

All field-installed wiring, including the electrical ground, **MUST** comply with the National Electrical Code (NEC) as well as applicable local codes. In addition, all field wiring must

conform to the Class II temperature limitations described in the NEC.

Operating voltage must be the same voltage and phase as shown in Table 3.

Refer to unit wiring diagrams Fig. 4-12 for a schematic of the field connections which must be made by the installing (or electrical) contractor.

Consult the unit wiring diagram located on the inside of the compressor access panel to ensure proper electrical hookup. The installing (or electrical) contractor must make the field connections when using field-supplied disconnect.

Make all final electrical connections with a length of flexible conduit to minimize vibration and sound transmission to the building.

**POWER CONNECTION** — Line voltage connection is made by connecting incoming line voltage wires to L1, L2, and L3 on the power distribution block.

**Table 3 — 50PSW Electrical Data**

50PSW UNIT SIZE	VOLTAGE (V-Ph-Hz)	VOLTAGE RANGE MIN/MAX	COMPRESSOR			TOTAL FLA	MCA	MOCP*
			RLA	LRA	QTY			
036	208/230-1-60	187/254	16.7	79.0	1	16.7	20.9	35
	265-1-60	239/292	13.5	72.0	1	13.5	16.9	30
	208/230-3-60	187/254	10.4	73.0	1	10.4	13.0	20
	460-3-60	414/506	5.8	38.0	1	5.8	7.3	15
	575-3-60	518/633	3.8	36.5	1	3.8	4.8	15
060	208/230-1-60	187/254	30.1	158.0	1	30.1	37.6	60
	208/230-3-60	187/254	20.5	155.0	1	20.5	25.6	45
	460-3-60	414/506	9.6	75.0	1	9.6	12.0	20
	575-3-60	518/633	7.6	54.0	1	7.6	9.5	15
120	208/230-1-60	187/254	30.1	158.0	2	60.2	67.7	90
	208/230-3-60	187/254	20.5	155.0	2	41.0	46.1	60
	460-3-60	414/506	9.6	75.0	2	19.2	21.6	30
	575-3-60	518/633	7.6	54.0	2	15.2	17.1	20
180	208/230-3-60	187/254	53.6	245.0	1	53.6	67.0	110
	460-3-60	414/506	20.7	125.0	1	20.7	25.9	45
	575-3-60	518/633	16.4	100.0	1	16.4	20.5	35
360	208/230-3-60	187/254	53.6	245.0	2	107.2	120.6	150
	460-3-60	414/506	20.7	125.0	2	41.4	46.6	60
	575-3-60	518/633	16.4	100.0	2	32.8	36.9	50

#### LEGEND


**FLA** — Full Load Amps  
**HACR** — Heating, Air Conditioning, and Refrigeration  
**LRA** — Locked Rotor Amps  
**MCA** — Minimum Circuit Amps  
**MOCP** — Minimum Overcurrent Protection  
**RLA** — Rated Load Amps





\*Time-delay fuse or HACR circuit breaker.





NOTE: The 460-v units using an internal secondary pump will require a neutral wire from the supply side in order to feed the accessory with 265-v.



**AL** — Alarm Relay Contacts  
**CB** — Circuit Breaker  
**CC** — Compressor Contactor  
**COMP** — Compressor  
**FP1** — Sensor, Source Low Temp Protection  
**FP2** — Sensor, Load Low Temp Protection  
**HP** — High Pressure Switch  
**JW4** — Jumper Wire for Alarm  
**LED** — Light-Emitting Diode  
**LOC** — Loss of Charge Pressure Switch  
**NEC** — National Electrical Code  
**P1** — Field Wiring Terminal Block  
**PDB** — Power Distribution Block

**RVS** — Reversing Valve Solenoid  
**TRANS** — Transformer  
**—** — Factory Line Voltage Wiring  
**—** — Factory Low Voltage Wiring  
**- - -** — Field Line Voltage Wiring  
**- - -** — Field Low Voltage Wiring  
**- · -** — Printed Circuit Trace  
 — Relay/Contactor Coil

 — Solenoid Coil  
 — Thermistor  
 — Ground  
 — Indicator Light  
 G=Green, R=Red  
 (Comp On) (Alarm Light)

 — Circuit Breaker  
 — High Pressure Switch  
 — Low Pressure Switch  
 — Fuse

\*Optional.

#### NOTES:

- Compressor motor thermally protected internally.
- All wiring to the unit must comply with NEC and local codes.
- Power Supply: 460 v and 575 v** — Transformer is factory wired for 460 v and 575 v power supply with wire lead colors as shown in the chart. The transformer is 75 va and is protected with a circuit breaker in the secondary circuit.
- Power Supply: 208-230 v** — Transformer is factory wired for 208 v power supply. For 230 v power supply, disconnect red lead at H2 and reconnect it at H3. The transformer is 150 va and is protected with primary and secondary fuses.
- FP1 thermistor provides low temp protection for source water. When using antifreeze solutions, cut JW3 jumper.
- 24-v alarm signal shown. For dry alarm contact, cut JW1 jumper and dry contact will be available between AL1 and AL2.
- Transformer secondary ground via Complete C board standoffs, and screws to control box. (Ground available from top two standoffs as shown.)
- Suffix 1 designates association with lead compressor, suffix 2 with lag compressor. Exception AL1, AL2, FP1, FP2, are per legend.
- Refer to Thermostat Installation, Application and Operation Manual for control wiring to the unit. Low voltage wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.

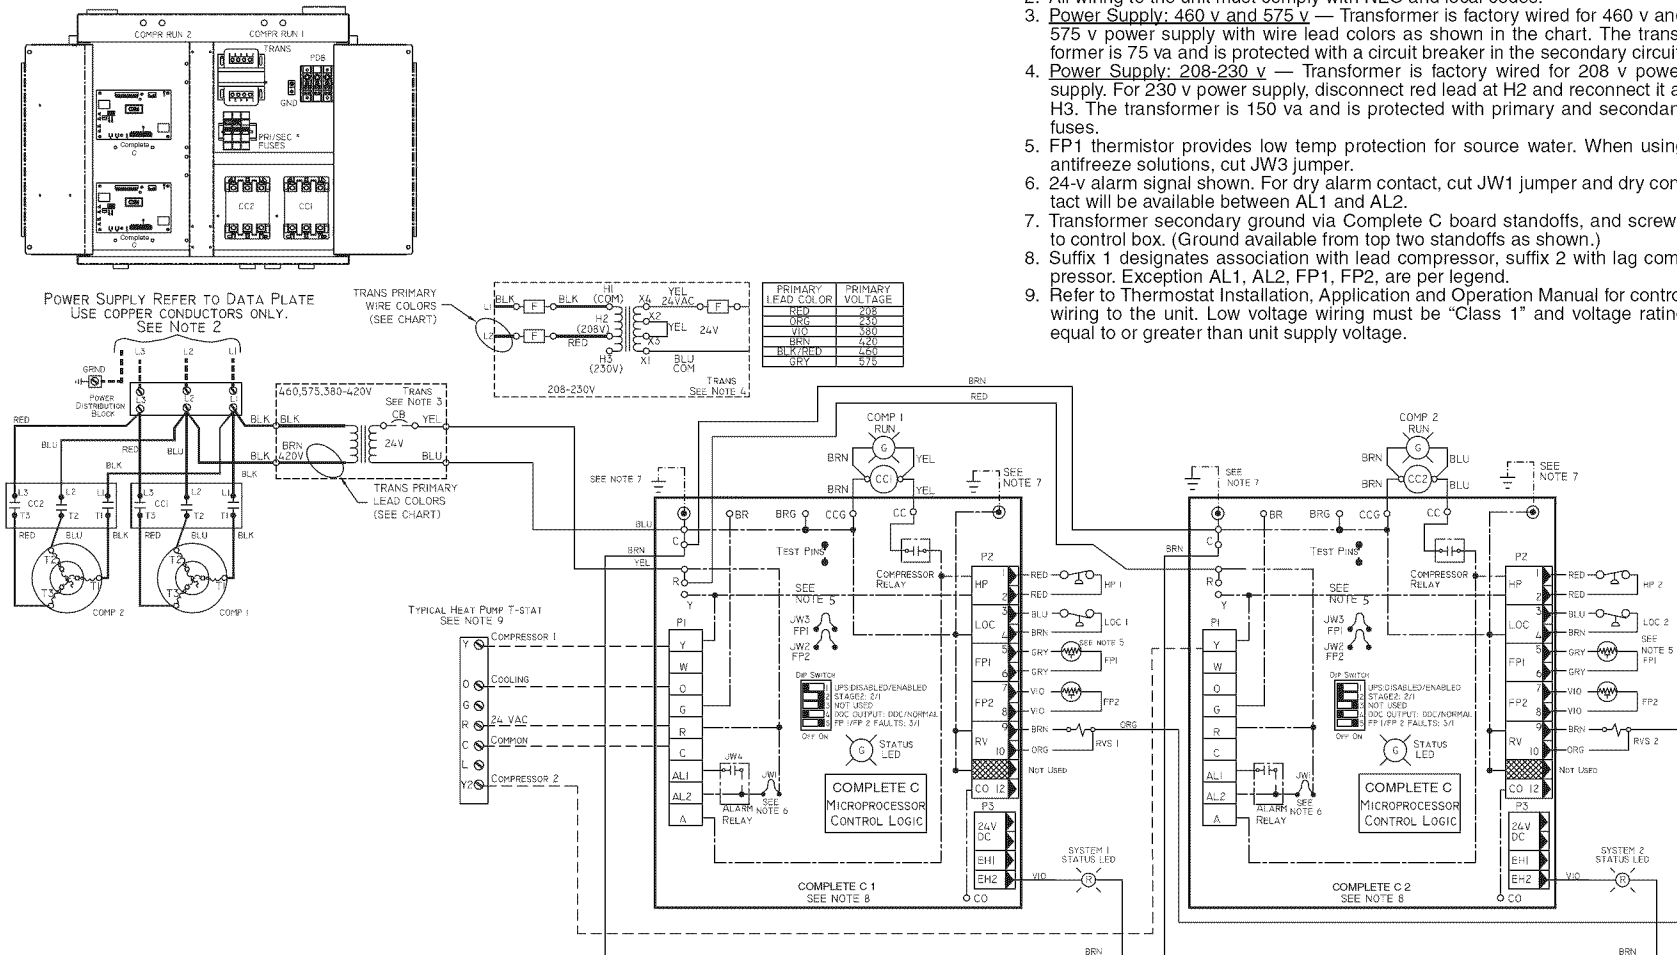
















Fig. 4 — Typical Aquazone™ 50PSW360 Complete C Control Wiring, 3-Phase



# LEGEND

AL	— Alarm Relay Contacts		Solenoid Coil
CAP	— Compressor Capacitor		Thermistor
CC	— Compressor Contactor		Ground
FP1	— Sensor, Source Low Temp Protection		Indicator Light G=Green, R=Red (Comp On) (Alarm Light)
FP2	— Sensor, Load Low Temp Protection		Circuit Breaker
HP	— High Pressure Switch		High Pressure Switch
JW1	— Jumper Wire for Alarm		Low Pressure Switch
LOC	— Loss of Charge Pressure Switch		Fuse
NEC	— National Electrical Code		
P1	— Field Wiring Terminal Block		
RVS	— Reversing Valve Solenoid		
TRANS	— Transformer		
	Factory Line Voltage Wiring		
	Factory Low Voltage Wiring		
	Field Line Voltage Wiring		
	Field Low Voltage Wiring		
	Printed Circuit Trace		
	Relay/Contactor Coil		

## NOTES:

- Compressor thermally protected internally.
- All wiring to the unit must comply with NEC and local codes.
- Transformer is wired to 265-v (BRN) lead for 265-1-60 units. For 220-240-v or 230-v units, disconnect BRN lead at L1 and connect ORG lead to L1. Close open end of BRN and RED leads with insulation tape. For 208-v unit, disconnect BRN lead at L1 and connect RED lead to L1. Close open ends of BRN and ORG leads with insulation tape. Transformer is energy limiting or may have circuit breaker.
- FP1 thermistor provides freeze protection for source water. When using anti-freeze solutions, cut JW3 jumper.
- Check installation wiring information for controller hookup. Control wiring must be Class 1 and voltage rating equal to or greater than unit supply voltage.
- Transformer secondary ground via Complete C board standoff and screws to control box. (Ground available from top 2 standoffs as shown.)


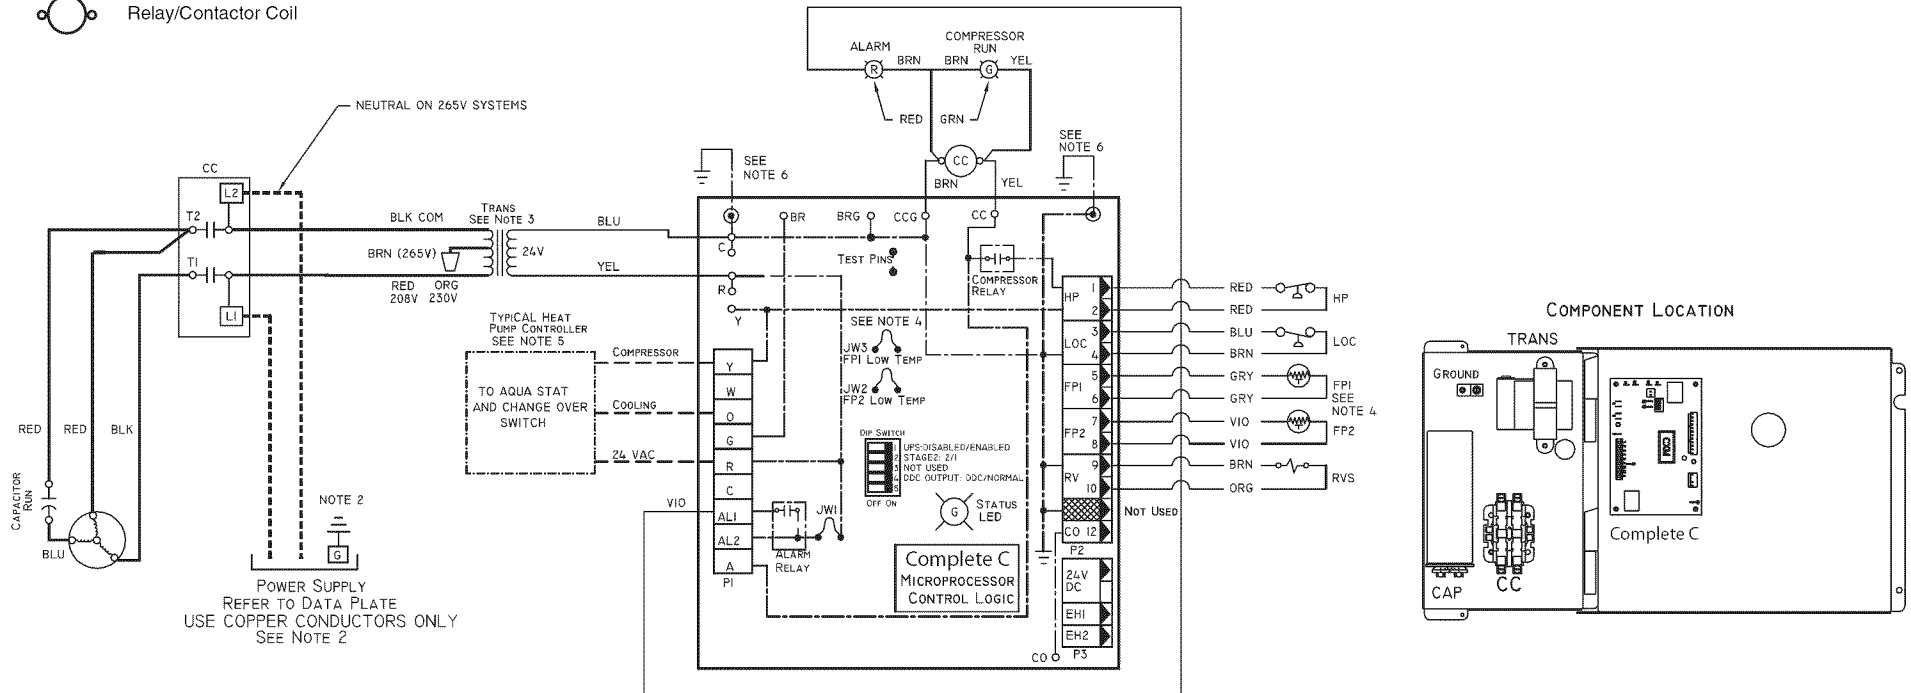






Fig. 5 — Typical Aquazone™ 50PSW036-180 Complete C Control Wiring, Single-Phase





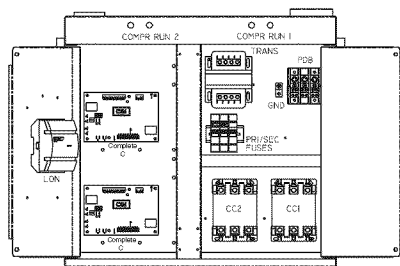








### LEGEND

- AL** — Alarm Relay Contacts
- CB** — Circuit Breaker
- CC** — Compressor Contactor
- COMP** — Compressor
- FP1** — Sensor, Source Low Temp Protection
- FP2** — Sensor, Load Low Temp Protection
- HP** — High Pressure Switch
- JW4** — Jumper Wire for Alarm
- LED** — Light-Emitting Diode
- LOC** — Loss of Charge Pressure Switch
- LON** — Local Operating Network
- NEC** — National Electrical Code
- P1** — Field Wiring Terminal Block
- PDB** — Power Distribution Block
- RVS** — Reversing Valve Solenoid
- TRANS** — Transformer


- |   |                             |
|---|-----------------------------|
|  | Factory Line Voltage Wiring |
|  | Factory Low Voltage Wiring  |
|  | Field Line Voltage Wiring   |
|  | Field Low Voltage Wiring    |
|  | Printed Circuit Trace       |

- |   |  |
|---|--|
|  | Relay/Contactor Coil   |
|  | Solenoid Coil  |
|  | Thermistor   |
|  | Ground   |
|  | Indicator Light<br>G=Green, R=Red<br>(Comp On) (Alarm Light) |
|  | Circuit Breaker  |
|  | High Pressure Switch   |
|  | Low Pressure Switch  |
|  | Fuse   |

\*Optional.

NOTES:

1. Compressor motor thermally protected internally.
2. All wiring to the unit must comply with NEC and local codes.
3. **Power Supply: 460 v and 575 v** — Transformer is factory wired for 460 v and 575 v power supply with wire lead colors as shown in the chart. The transformer is 75 va and is protected with a circuit breaker in the secondary circuit.
4. **Power Supply: 208-230 v** — Transformer is factory wired for 208 v power supply. For 230 v power supply, disconnect red lead at H2 and reconnect it at H3. The transformer is 150 va and is protected with primary and secondary fuses.
5. FP1 thermistor provides low temp protection for source water. When using antifreeze solutions, cut JW3 jumper.
6. Factory cut JW1 jumper. Dry contact will be available between AL1 and AL2.
7. Transformer secondary ground via Complete C board standoffs, and screws to control box. (Ground available from top two standoffs as shown.)
8. Suffix 1 designates association with lead compressor, suffix 2 with lag compressor. Exception AL1, AL2, FP1, FP2, are per legend.
9. Refer to LON, or Thermostat Installation, Application and Operation Manual for control wiring to the unit. Low voltage wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.

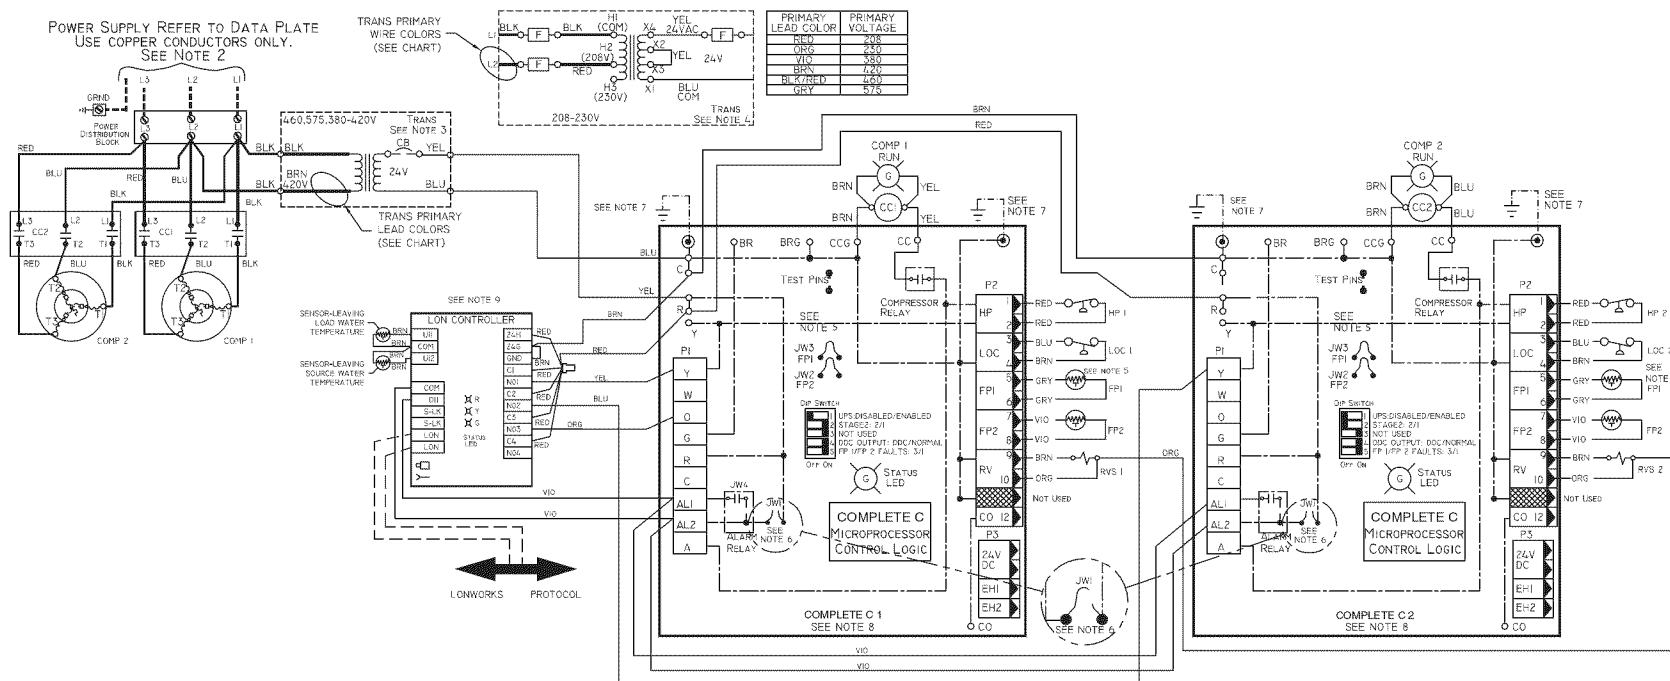

**Fig. 6 — Typical Aquazone™ 50PSW360 Complete C and LON Controller Control Wiring, 3-Phase**



**AL** — Alarm Relay Contacts  
**ASTAT** — Aquastat  
**CB** — Circuit Breaker  
**CAP** — Compressor Capacitor  
**CC** — Compressor Contactor  
**FP1** — Sensor, Source Low Temp Protection  
**FP2** — Sensor, Load Low Temp Protection  
**GND** — Ground  
**HWG** — Hot Water Generator  
**HP** — High Pressure Switch  
**JW1** — Jumper Wire for Alarm  
**LOC** — Loss of Charge Pressure Switch  
**NEC** — National Electrical Code

**P1** — Field Wiring Terminal Block  
**PDB** — Power Distribution Block  
**RVS** — Reversing Valve Solenoid  
**TRANS** — Transformer  
 ——— Factory Line Voltage Wiring  
 ——— Factory Low Voltage Wiring  
 - - - Field Line Voltage Wiring  
 - - - Field Low Voltage Wiring  
 - . - Printed Circuit Trace  
 ○ — Relay/Contactor Coil

Solenoid Coil  
 Thermistor  
 Ground  
 Indicator Light  
 G=Green, R=Red  
 (Comp On) (Alarm Light)  
 Circuit Breaker  
 High Pressure Switch  
 Low Pressure Switch  
 Fuse

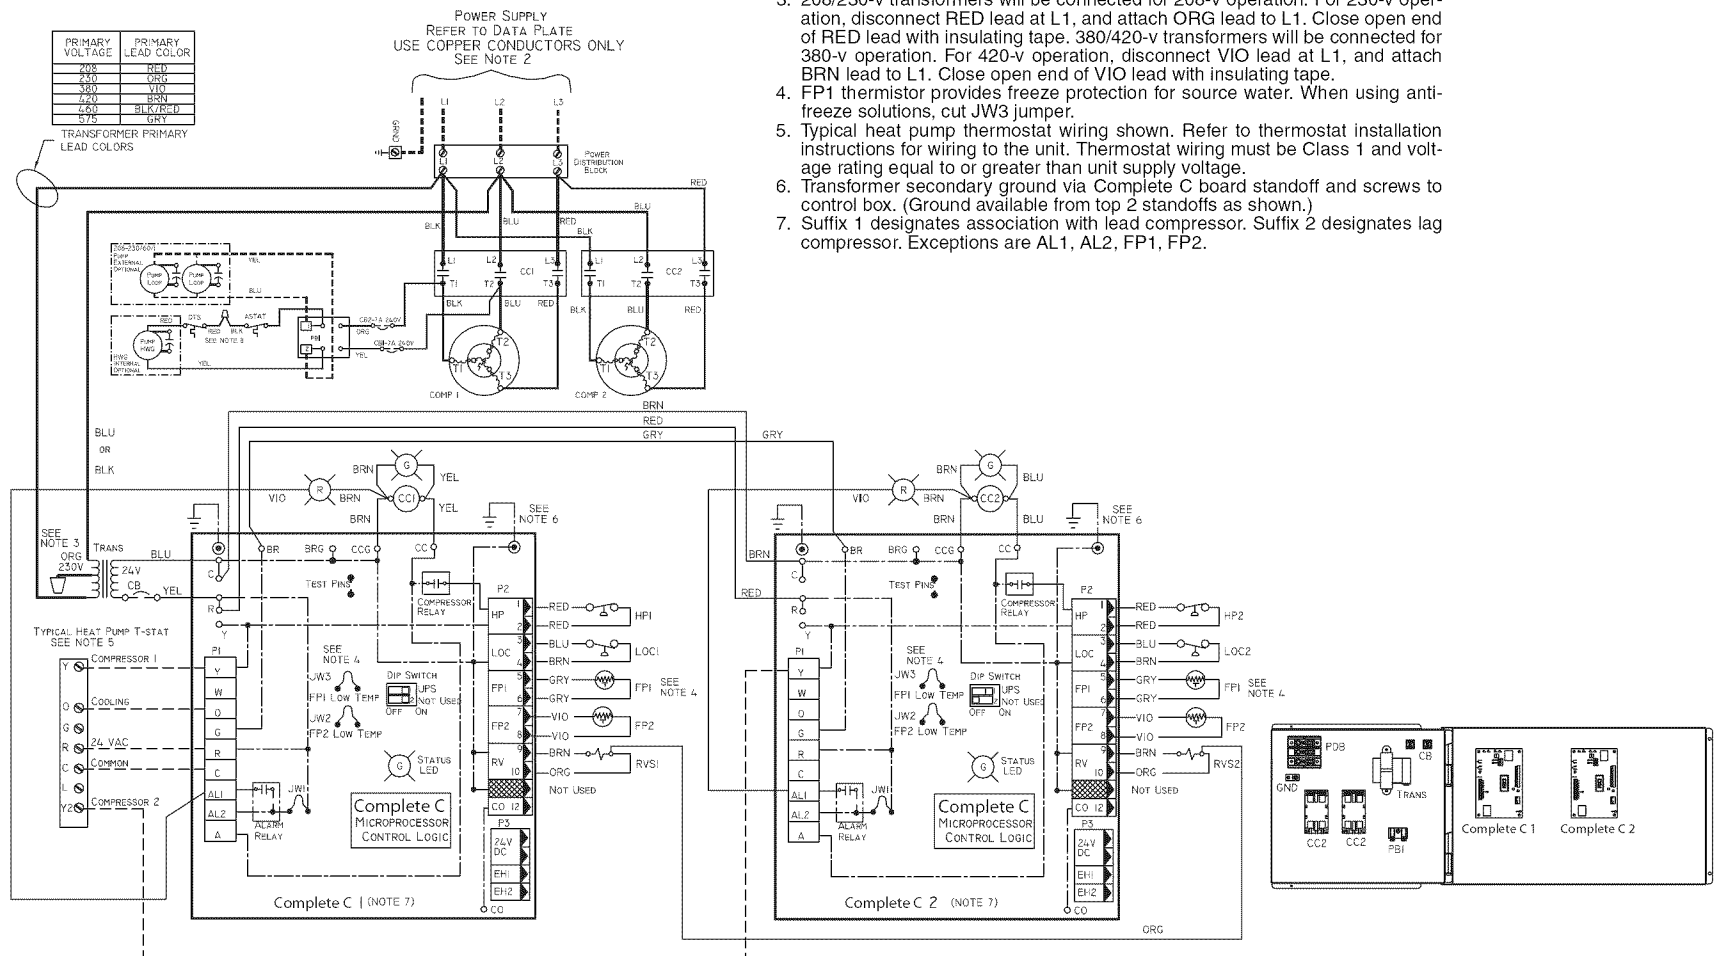








Fig. 7 — Typical Aquazone™ 50PSW036-180 Complete C Control Wiring, 3-Phase











### LEGEND


- AL — Alarm Relay Contacts
- CB — Circuit Breaker
- CC — Compressor Contactor
- COMP — Compressor
- FP1 — Sensor, Source Low Temp Protection
- FP2 — Sensor, Load Low Temp Protection
- HP — High Pressure Switch
- JW4 — Jumper Wire for Alarm
- LED — Light-Emitting Diode
- LOC — Loss of Charge Pressure Switch
- NEC — National Electrical Code
- P1 — Field Wiring Terminal Block
- PDB — Power Distribution Block

**RVS** — Reversing Valve Solenoid  
**TRANS** — Transformer

 Factory Line Voltage Wiring  
 Factory Low Voltage Wiring  
 Field Line Voltage Wiring  
 Field Low Voltage Wiring  
 Printed Circuit Trace  
 Relay/Contactor Coil

	Solenoid Coil
	Thermistor
	Ground
	Indicator Light
	G=Green, R=Red
	(Comp On) (Alarm Light)

	Circuit Breaker
	High Pressure Switch
	Low Pressure Switch
	Fuse

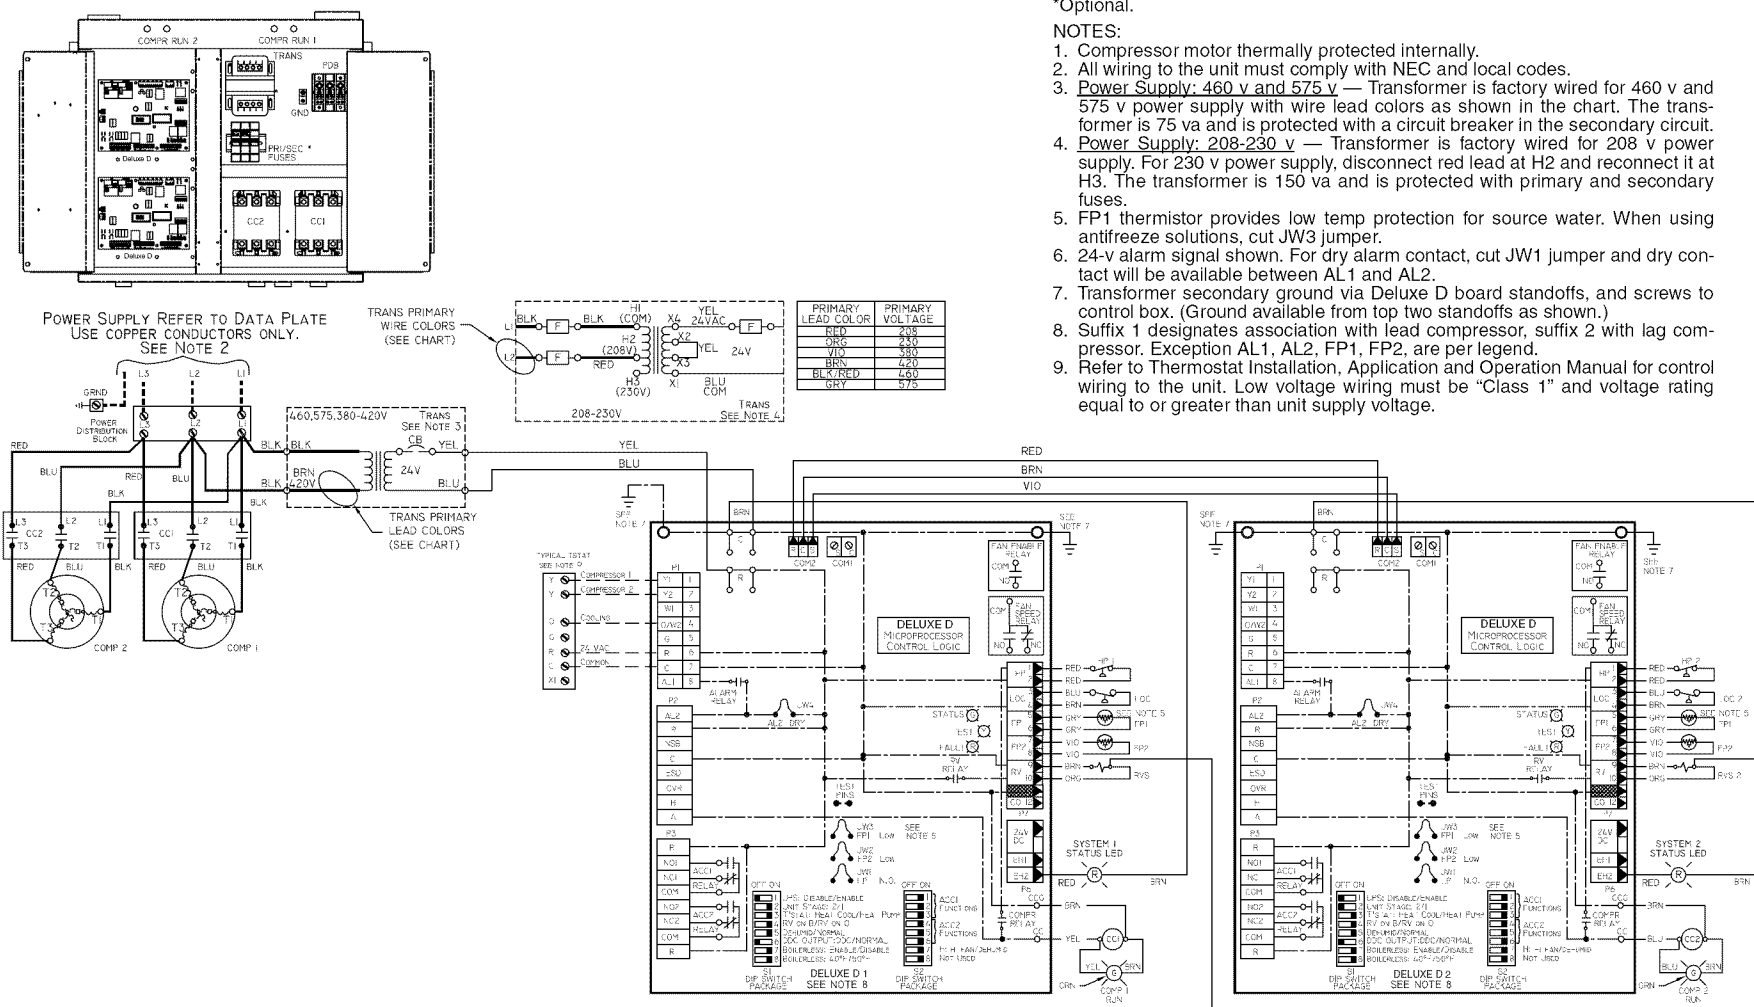






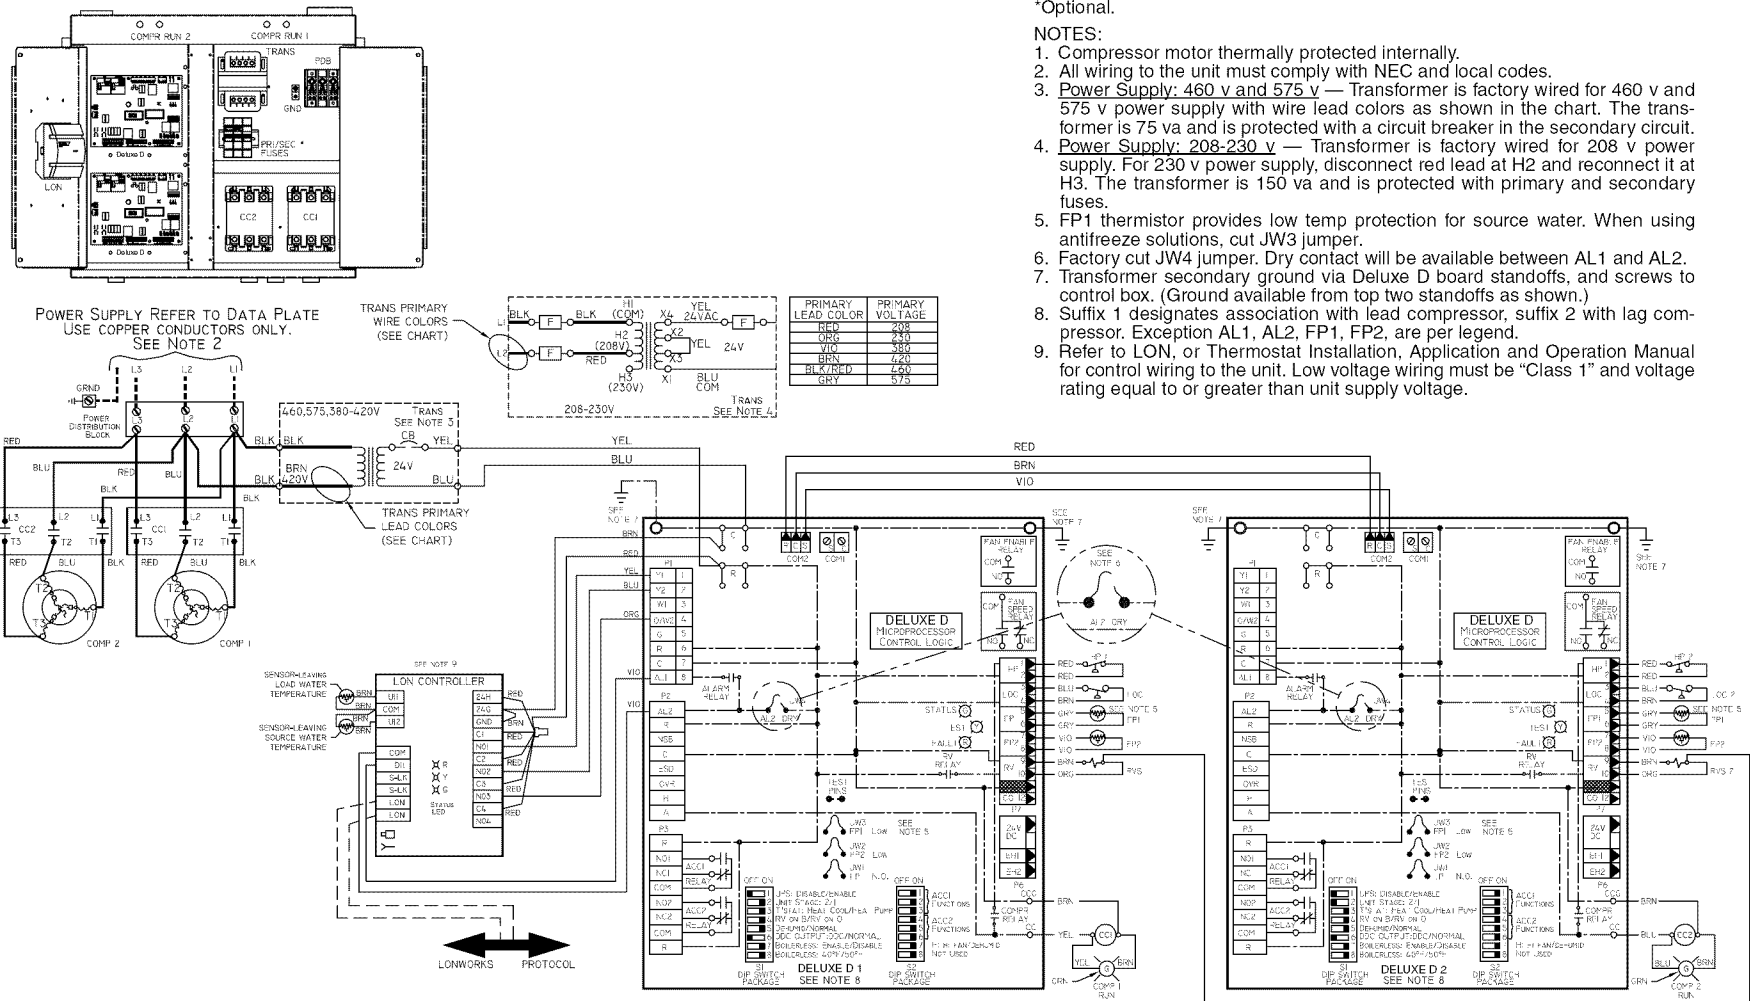
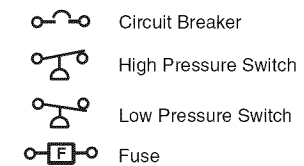
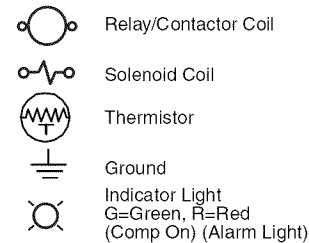
**Fig. 8 — Typical Aquazone™ 50PSW360 Deluxe D Control Wiring, 3-Phase**



### LEGEND

- AL — Alarm Relay Contacts
- CB — Circuit Breaker
- CC — Compressor Contactor
- COMP — Compressor
- FP1 — Sensor, Source Low Temp Protection
- FP2 — Sensor, Load Low Temp Protection
- HP — High Pressure Switch
- JW4 — Jumper Wire for Alarm
- LED — Light-Emitting Diode
- LOC — Loss of Charge Pressure Switch
- LON — Local Operating Network
- NEC — National Electrical Code
- P1 — Field Wiring Terminal Block

<b>PDB</b>	—	Power Distribution Block
<b>RVS</b>	—	Reversing Valve Solenoid
<b>TRANS</b>	—	Transformer
		Factory Line Voltage Wiring
		Factory Low Voltage Wiring
		Field Line Voltage Wiring
		Field Low Voltage Wiring
		Printed Circuit Trace




\*Optional.

NOTES:


1. Compressor motor thermally protected internally.
2. All wiring to the unit must comply with NEC and local codes.
3. **Power Supply: 460 v and 575 v** — Transformer is factory wired for 460 v and 575 v power supply with wire lead colors as shown in the chart. The transformer is 75 va and is protected with a circuit breaker in the secondary circuit.
4. **Power Supply: 208-230 v** — Transformer is factory wired for 208 v power supply. For 230 v power supply, disconnect red lead at H2 and reconnect it at H3. The transformer is 150 va and is protected with primary and secondary fuses.
5. FP1 thermistor provides low temp protection for source water. When using antifreeze solutions, cut JW3 jumper.
6. Factory cut JW4 jumper. Dry contact will be available between AL1 and AL2.
7. Transformer secondary ground via Deluxe D board standoffs, and screws to control box. (Ground available from top two standoffs as shown.)
8. Suffix 1 designates association with lead compressor, suffix 2 with lag compressor. Exception AL1, AL2, FP1, FP2, are per legend.
9. Refer to LON, or Thermostat Installation, Application and Operation Manual for control wiring to the unit. Low voltage wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.

**Fig. 9 — Typical Aquazone™ 50PSW360 Deluxe D and LON Controller Control Wiring, 3-Phase**



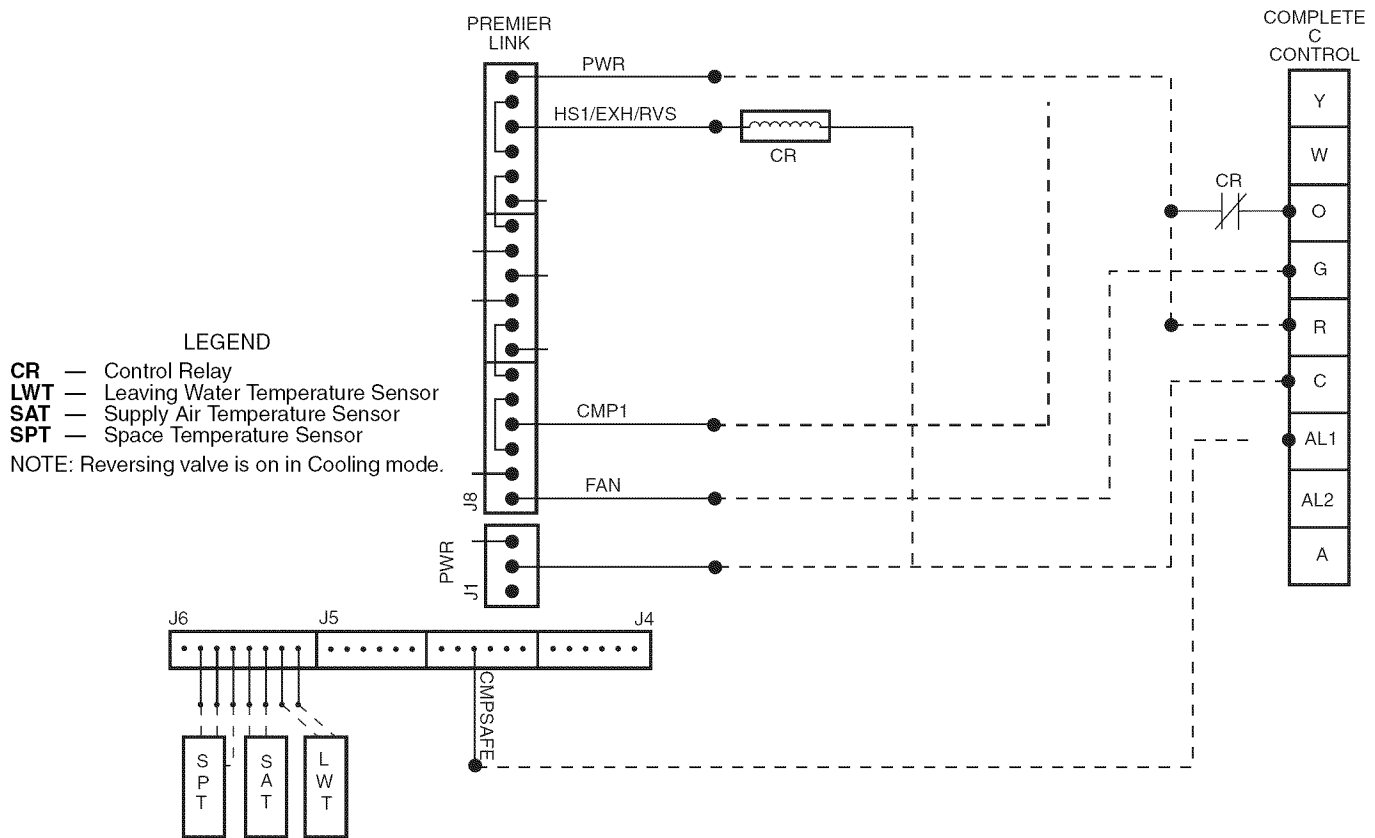


**Fig. 10 — PremierLink™ Controller Applications with Complete C Control**

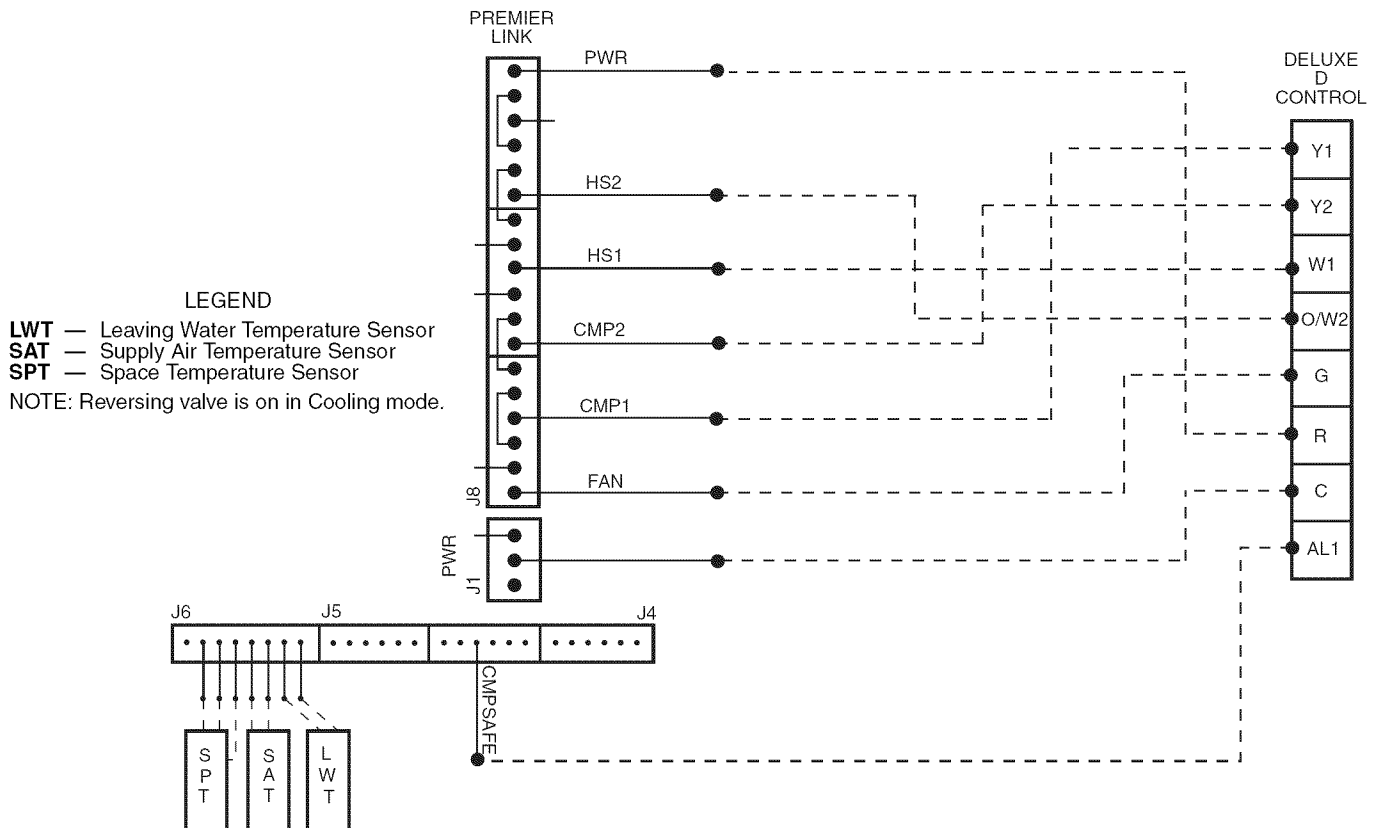

**Fig. 11 — PremierLink Controller Applications with Deluxe D Control**



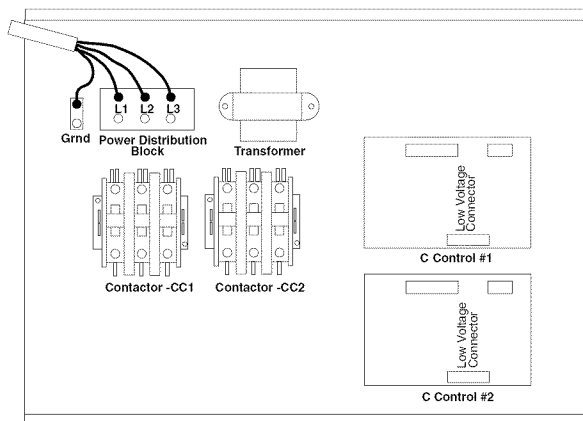

**Fig. 12 — Typical Field Wiring**


**SUPPLY VOLTAGE** — Operating voltage to unit must be within voltage range indicated on unit nameplate.

Voltages between phases must be balanced within 2%. Use the following formula to determine the percentage voltage imbalance:

% Voltage Imbalance

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.

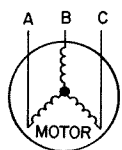

AB = 452-v  
BC = 464-v  
AC = 455-v

$$\text{Average Voltage} = \frac{452 + 464 + 455}{3}$$

$$= \frac{1371}{3}$$

$$= 457$$

Determine maximum deviation from average voltage:

(AB) 457 - 452 = 5-v

(BC) 464 - 457 = 7-v

(AC) 457 - 455 = 2-v

Maximum deviation is 7-v.

Determine percent voltage imbalance.

$$\begin{aligned} \text{\% Voltage Imbalance} &= 100 \times \frac{7}{457} \\ &= 1.53\% \end{aligned}$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

Operation on improper line voltage or excessive phase imbalance constitutes abuse and may cause damage to electrical components.

**NOTE:** If more than 2% voltage imbalance is present, contact local electric utility.

**EXTERNAL LOOP POWER CONNECTION** — If the unit is to be connected to an external loop pump or flow controller, connect the pump to the loop pump terminal block PB1. The maximum power handling is 4 amps at 240-v. The pumps will automatically cycle as required by the unit.

**208-V OPERATION** — All 208/240-v units are factory wired for 208-v. The transformers may be switched to 240-v operation (as illustrated on the wiring diagram) by switching the red (208-v) wire with the orange (240-v) wire at the L2 terminal.


**460-VOLT OPERATION** — Units using 460-v and internal secondary pump will require a neutral wire from the supply side in order to feed accessory with 265-v.

## Step 7 — Wire Low Voltage Connections

### THERMOSTAT CONNECTIONS


The thermostat should be wired directly to the Aquazone™ control board. See Fig. 4-9.

**WATER FREEZE PROTECTION** — The Aquazone control allows the field selection of source fluid freeze protection points through jumpers. The factory setting of jumper JW3 (FP1) is set for water at 30 F. In earth loop applications, jumper JW3 should be clipped to change the setting to 10 F when using antifreeze in colder earth loop applications. See Fig. 13.

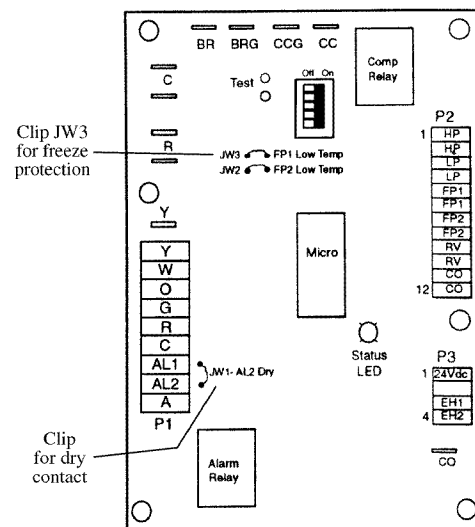

**Fig. 13 — Typical Aquazone Control Board Jumper Locations (Complete C Control Shown)**

**ACCESSORY CONNECTIONS** — The terminal labeled A on the control is provided to control accessory devices such as water valves, electronic air cleaners, humidifiers, etc. This signal operates with the compressor terminal. See Fig. 14. Refer to the specific unit wiring schematic for details.

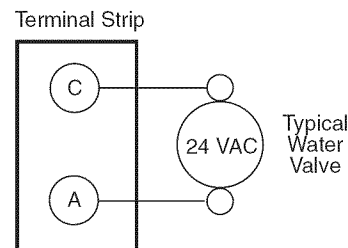

**Fig. 14 — Typical Aquazone Accessory Wiring (Deluxe D Control Shown)**

**NOTE:** The A terminal should *only* be used with 24-v signals, not line voltage signals.

**IMPORTANT:** Two-compressor units with Complete C or Deluxe D controls wired to terminal A will be turned off if the controls are in lockout mode, even if the other board is in normal operating mode.



**WATER SOLENOID VALVES** — Water solenoid valves may be used on variable flow systems and ground water installations. A typical well water control valve wiring which can limit waste water in a lockout condition is shown in Fig. 14. A slow closing valve may be required to prevent water hammer. When using a slow closing valve, special wiring conditions need to be considered. The valve takes approximately 60 seconds to open (very little water will flow before 45 seconds) and it activates the compressor only after the valve is completely opened by closing its end switch. When wired as shown, the valve will have the following operating characteristics:

1. Remain open during a lockout.
2. Draw approximately 25 to 35-va through the “Y” signal of the thermostat.

**IMPORTANT:** This can overheat the anticipators of electromechanical thermostats. Only use relay based electronic thermostats.

## PRE-START-UP

**System Checkout** — When the installation is complete, follow the system checkout procedure outlined below before starting up the system. Be sure:

1. Voltage is within the utilization range specifications of the unit compressor and fan motor, and voltage is balanced for 3-phase units.
2. Fuses, breakers and wire are correct size.
3. Low voltage wiring is complete.
4. Piping and system flushing is complete.
5. Air is purged from closed loop system.
6. System is balanced as required. Monitor if necessary.
7. Isolation valves are open.
8. Water control valves or loop pumps are wired.
9. Transformer switched to lower voltage tap if necessary.
10. Service/access panels are in place.
11. Control field-selected settings are correct.

## FIELD SELECTABLE INPUTS

Jumpers and DIP (dual in-line package) switches on the control board are used to customize unit operation and can be configured in the field.

**IMPORTANT:** Jumpers and DIP switches should only be clipped when power to control board has been turned off.

## Complete C Control Jumper Settings (See Fig. 4-7)

**WATER COIL FREEZE PROTECTION (FP1) LIMIT SETTING** — Select jumper 3, (JW3-FP1 Low Temp) to choose FP1 limit of 10 F or 30 F. To select 30 F as the limit, DO NOT clip the jumper. To select 10 F as the limit, clip the jumper.

**ALARM RELAY SETTING** — Select jumper 1 (JW1-AL2 Dry) for connecting alarm relay terminal (AL2) to 24 vac (R) or to remain as a dry contact (no connection). To connect AL2 to R, do not clip the jumper. To set as dry contact, clip the jumper.

**Complete C Control DIP Switches** — The Complete C control has one DIP switch block with five switches. See Fig. 4-7.

**PERFORMANCE MONITOR (PM)** — DIP switch 1 will enable or disable this feature. To enable the PM, set the switch to ON. To disable the PM, set the switch to OFF.

**STAGE 2** — DIP switch 2 will enable or disable compressor delay. Set DIP switch to OFF for Stage 2 in which the compressor will have a 3-second delay before energizing. DIP switch 3 is not used. DIP switch 4 is not used. DIP switch 5 is used to initiate one or 3 tries for the FP1 fault. If water freeze protection for the water coil is needed, then DIP switch 5 can be set to lock out on the FP1 fault after one try.

## Deluxe D Control Jumper Settings (See Fig. 8 and 9)

**WATER COIL FREEZE PROTECTION (FP1) LIMIT SETTING** — Select jumper 3, (JW3-FP1 Low Temp) to choose FP1 limit of 10 F or 30 F. To select 30 F as the limit, DO NOT clip the jumper. To select 10 F as the limit, clip the jumper.

**ALARM RELAY SETTING** — Select jumper 4 (JW4-AL2 Dry) for connecting alarm relay terminal (AL2) to 24 vac (R) or to remain as a dry contact (no connection). To connect AL2 to R, do not clip the jumper. To set as dry contact, clip the jumper.

**LOW PRESSURE SETTING** — The Deluxe D control can be configured for Low Pressure Setting (LP). Select jumper 1 (JW1-LP Norm Open) for choosing between low pressure input normally opened or closed. To configure for normally closed operation, do not clip the jumper. To configure for normally open operation, clip the jumper.

**Deluxe D Control DIP Switches** — The Deluxe D control has 2 DIP switch blocks. Each DIP switch block has 8 switches and is labeled either S1 or S2 on the circuit board. See Fig. 8 and 9.

**DIP SWITCH BLOCK 1 (S1)** — This set of switches offers the following options for Deluxe D control configuration:

**Performance Monitor (PM)** — Set switch 1 to enable or disable performance monitor. To enable the PM, set the switch to ON. To disable the PM, set the switch to OFF.

**Compressor Relay Staging Operation** — Switch 2 will enable or disable compressor relay staging operation. The compressor relay can be set to turn on with Stage 1 or Stage 2 call from the thermostat. This setting is used with dual stage units (units with 2 compressors and 2 Deluxe D controls) or in master/slave applications. In master/slave applications, each compressor and fan will stage according to its switch 2 setting. If switch is set to Stage 2, the compressor will have a 3-second delay before energizing during Stage 2 demand.

**NOTE:** If DIP switch is set for Stage 2, the alarm relay will not cycle during Test mode.

**Heating/Cooling Thermostat Type** — Switch 3 provides selection of thermostat type. Heat pump or heat/cool thermostats can be selected. Select OFF for heat/cool thermostats. When in heat/cool mode, Y1 is used for cooling Stage 1, Y2 is used for cooling Stage 2, W1 is used for heating Stage 1 and O/W2 is used for heating Stage 2. Select ON for heat pump applications. In heat pump mode, Y1 used is for compressor Stage 1, Y2 is used for compressor Stage 2, W1 is used for heating Stage 3 or emergency heat, and O/W2 is used for RV (heating or cooling) depending upon switch 4 setting.

**O/B Thermostat Type** — Switch 4 provides selection for heat pump O/B thermostats. O is cooling output. B is heating output. Select ON for heat pumps with O output. Select OFF for heat pumps with B output.

**Dehumidification Fan Mode** — Switch 5 provides selection of normal or dehumidification fan mode. Select OFF for dehumidification mode. The fan speed relay will remain OFF during cooling Stage 2. Select ON for normal mode. The fan speed relay will turn on during cooling Stage 2 in normal mode.

**Switches 6, 7, 8** — Not used.

**DIP SWITCH BLOCK 2 (S2)** — Not used.



**Deluxe D Control Accessory Relay Configurations (See Tables 4 and 5)** — The following accessory relay settings are applicable for Deluxe D control only:

**CYCLE WITH COMPRESSOR** — In this configuration, the relay will be ON any time the compressor relay is on.

**DIGITAL NIGHT SETBACK (NSB)** — In this configuration, the relay will be ON if the NSB input is connected to ground C.

**NOTE:** If there are no relays configured for digital NSB, then the NSB and OVR inputs are automatically configured for mechanical operation.

**MECHANICAL NIGHT SETBACK** — When NSB input is connected to ground C, all thermostat inputs are ignored. A thermostat setback heating call will then be connected to the OVR input. If OVR input becomes active, then the Deluxe D control will enter night low limit (NLL) staged heating mode. The NLL staged heating mode will then provide heating during the NSB period.

**WATER VALVE (SLOW OPENING)** — If relay is configured for water valve (slow opening), the relay will start 60 seconds prior to starting compressor relay.

### ⚠ CAUTION

To avoid equipment damage, DO NOT leave system filled in a building without heat during the winter unless anti-freeze is added to system water. Condenser coils never fully drain by themselves and will freeze unless winterized with antifreeze.

**Table 4 — DIP Switch Block S2 — Accessory 1 Relay Options**

ACCESSORY 1 RELAY OPTIONS	DIP SWITCH POSITION		
	1	2	3
Digital NSB	Off	On	On
Water Valve — Slow Opening	On	Off	On

#### LEGEND

**NSB** — Night Setback

**NOTE:** All other DIP switch combinations are invalid.

**Table 5 — DIP Switch Block S2 — Accessory 2 Relay Options**

ACCESSORY 2 RELAY OPTIONS	DIP SWITCH POSITION		
	4	5	6
Digital NSB	Off	On	On
Water Valve — Slow Opening	On	Off	On

#### LEGEND

**NSB** — Night Setback

**NOTE:** All other DIP switch combinations are invalid.

## START-UP

Use the procedure outlined below to initiate proper unit start-up.

**NOTE:** This equipment is designed for indoor installation only.

### Operating Limits (See Table 6)

**ENVIRONMENT** — This equipment is designed for indoor installation ONLY. Extreme variations in temperature, humidity and corrosive water or air will adversely affect the unit performance, reliability and service life.

**POWER SUPPLY** — A voltage variation of  $\pm 10\%$  of nameplate utilization voltage is acceptable.

**UNIT STARTING CONDITIONS** — All units start and operate in an ambient of 45 F with entering air at 40 F and entering water at 20 F.

**NOTE:** These operating conditions are not normal or continuous operating conditions. It is assumed that start-up is for the purpose of bringing the building space up to occupancy temperature.

### ⚠ WARNING

When the disconnect switch is closed, high voltage is present in some areas of the electrical panel. Exercise caution when working with the energized equipment.

**Table 6 — 50PSW Unit Operating Limits**

WATER LIMITS	COOLING (F)	HEATING (F)
<b>SOURCE COIL</b>		
Min Entering Water	50	20
Normal Entering Water	85	60
Max Entering Water	110	70
<b>LOAD COIL</b>		
Min Entering Water	50	60
Normal Entering Water	60	100
Max Entering Water	90	120

## Unit Start-Up

1. Turn off all power to unit.
2. Adjust all valves to full open position.
3. Restore power to unit.
4. Operate each unit in the cooling cycle. See Table 6 for unit entering water temperatures.
5. Operate each heat pump in the heating cycle immediately after checking cooling cycle operation.

**NOTE:** A time delay will prevent the compressor from re-starting for approximately 5 minutes. The time delay function can be overridden on the Complete C control board.

6. If unit fails to operate, perform the following system checks:
  - a. Check the voltage and current. Be sure they comply with electrical data on unit nameplate.
  - b. Check for loose terminal screws where wire connections have been made on both the line and low-voltage terminal boards.
  - c. Check the supply and return piping. Be sure they are properly connected to the inlet and outlet connections on the unit.
  - d. If the checks described above fail to reveal the problem and the unit still will not operate, contact a trained service technician to ensure proper diagnosis.

**Scroll Compressor Rotation** — It is important to be certain compressor is rotating in the proper direction. To determine whether or not compressor is rotating in the proper direction:

1. Connect service gages to suction and discharge pressure fittings.
2. Energize the compressor.
3. The suction pressure should drop and the discharge pressure should rise, as is normal on any start-up.



If the suction pressure does not drop and the discharge pressure does not rise to normal levels:

1. Turn off power to the unit. Install disconnect tag.
2. Reverse any two of the unit power leads.
3. Reapply power to the unit and verify pressures are correct. The suction and discharge pressure levels should now move to their normal start-up levels.

### ⚠ CAUTION

When the compressor is rotating in the wrong direction, the unit makes an elevated level of noise and does not provide cooling. Damage to compressor will occur if allowed to operate in this manner.

After a few minutes of reverse operation, the scroll compressor internal overload protection will open, thus activating the unit lockout. This requires a manual reset. To reset, turn the thermostat on and then off.

NOTE: There is a 5-minute time delay before the compressor will start.

**Flow Regulation** — Flow regulation can be accomplished by two methods. Most water control valves have a flow adjustment built into the valve. By measuring the pressure drop through the unit heat exchanger, the flow rate can be determined. Adjust the water control valve until the flow of 1.5 to 2 gpm is achieved. Since the pressure constantly varies, two pressure gages may be needed in some applications. See Table 7 for heat exchanger pressure drops.

An alternative method is to install a flow control device. These devices are typically an orifice of plastic material designed to allow a specified flow rate that are mounted on the outlet of the water control valve. Occasionally these valves produce a velocity noise that can be reduced by applying some back pressure. To accomplish this, slightly close the leaving isolation valve of the water regulating device.

**Table 7 — Heat Exchanger Pressure Drop**  
Load/Outdoor Coax

UNIT 50PSW	GPM	PRESSURE DROP (psi)			
		30° F	50° F	70° F	90° F
036	5.0	4.2	2.3	1.6	1.3
	7.0	5.8	4.1	2.9	2.6
	9.0	8.4	5.3	4.6	4.3
060	7.5	3.1	1.9	1.4	1.1
	11.3	5.0	3.4	2.9	2.2
	15.0	7.4	5.6	4.6	3.9
120	15.0	4.3	2.6	2.0	1.6
	22.6	7.0	4.8	3.9	3.1
	30.0	10.3	7.8	6.4	5.3
180	18.0	0.8	0.4	0.2	0.1
	27.0	2.7	1.7	1.5	1.4
	35.0	4.8	3.3	3.0	2.8
360	35.0	1.6	1.2	1.0	0.9
	53.0	4.0	3.6	3.3	3.0
	70.0	7.2	6.5	5.9	5.5

Source/Outdoor Coax

UNIT 50PSW	GPM	PRESSURE DROP (psi)			
		30° F	50° F	70° F	90° F
036	5.0	4.2	2.6	2.3	1.8
	7.0	5.8	4.1	4.1	3.1
	9.0	8.4	6.0	5.5	4.9
060	7.5	3.1	2.2	1.9	1.5
	11.3	5.0	4.0	3.6	3.1
	15.0	7.4	6.1	5.5	5.0
120	15.0	4.3	3.1	2.7	2.1
	22.6	7.0	5.6	5.0	4.3
	30.0	10.3	8.5	7.7	7.0
180	18.0	0.8	0.4	0.2	0.1
	27.0	2.7	1.7	1.5	1.4
	35.0	4.8	3.3	3.0	2.8
360	35.0	1.6	1.2	1.0	0.9
	53.0	4.0	3.6	3.3	3.0
	70.0	7.2	6.5	5.9	5.5

**Cleaning and Flushing** — Cleaning and flushing of the piping system is the single most important step to ensure proper start-up and continued efficient operation of the system.

### ⚠ WARNING

To avoid possible injury or death due to electrical shock, open the power supply disconnect switch and secure it in an open position before flushing system. Install lockout tag.

Follow the instructions below to properly clean and flush the system:

1. Verify electrical power to the unit is disconnected and lockout tag installed.
2. Install the system with the supply hose connected directly to the return riser valve. Use a single length of flexible hose.
3. Open all air vents. Fill the system with the water. DO NOT allow system to overflow. Bleed all air from the system. Pressurize and check the system for leaks and repair appropriately.
4. Verify all strainers are in place. Start the pumps, and systematically check each vent to ensure all air is bled from the system.
5. Verify make-up water is available. Adjust make-up water appropriately to replace the air which was bled from the system. Check and adjust the water/air level in the expansion tank.
6. Raise the loop temperature to approximately 85 F. Open the drain at the lowest point in the system. Adjust the make-up water replacement rate to equal the rate of bleed.
7. Refill the system and add trisodium phosphate in a proportion of approximately one pound per 150 gal. of water (or other equivalent approved cleaning agent).

### ⚠ CAUTION

To avoid possible damage to a plastic (PVC) piping system, do not allow temperatures to exceed 110 F.

Raise the loop temperature to 100 F. Circulate the solution for a minimum of 8 to 24 hours. At the end of this period, shut off the circulating pump and drain the solution. Repeat system cleaning if desired.

8. When the cleaning process is complete, remove the short-circuited hose. Reconnect the hoses to the proper supply, and return the connections to each of the units. Refill the system and bleed off all air.
9. Test the system pH with litmus paper. The system water should be slightly alkaline (pH of 7.5 to 8.5). Add chemicals, as appropriate, to maintain acidity levels.
10. When the system is successfully cleaned, flushed, refilled and bled, restore power.
11. Check the main system panels, safety cutouts and alarms. Set the controls to properly maintain loop temperatures.

### ⚠ CAUTION

DO NOT use "Stop Leak" or any similar chemical agent in this system. Addition of these chemicals to the loop water will foul the system and inhibit unit operation.

**Antifreeze** — In areas where entering loop temperatures drop below 40 F or where piping will be routed through areas subject to freezing, antifreeze is needed.



Alcohols and glycols are commonly used as antifreeze agents. Freeze protection should be maintained to 15 F below the lowest expected entering loop temperature. For example, if the lowest expected entering loop temperature is 30 F, the leaving loop temperature would be 22 to 25 F. Therefore, the freeze protection should be at 15 F (30 F – 15 F = 15 F).

**IMPORTANT:** All alcohols should be pre-mixed and pumped from a reservoir outside of the building or introduced under water level to prevent alcohols from fuming.

Calculate the total volume of fluid in the piping system. See Table 8. Use the percentage by volume in Table 9 to determine the amount of antifreeze to use. Antifreeze concentration should be checked from a well mixed sample using a hydrometer to measure specific gravity.

**FREEZE PROTECTION SELECTION** — The 30 F FP1 factory setting (water) should be used to avoid freeze damage to the unit.

Once antifreeze is selected, the JW3 jumper (FP1) should be clipped on the control to select the low temperature (antifreeze 10 F) set point to avoid nuisance faults.

**Table 8 — Approximate Fluid Volume (gal.) per 100 Ft of Pipe**

PIPE	DIAMETER (in.)	VOLUME (gal.)
Copper	1	4.1
	1.25	6.4
	1.5	9.2
Rubber Hose	1	3.9
Polyethylene	3/4 IPS SDR11	2.8
	1 IPS SDR11	4.5
	1 1/4 IPS SDR11	8.0
	1 1/2 IPS SDR11	10.9
	2 IPS SDR11	18.0
	1 1/4 IPS SCH40	8.3
	1 1/2 IPS SCH40	10.9
	2 IPS SCH40	17.0

**LEGEND**

**IPS** — Internal Pipe Size  
**SCH** — Schedule  
**SDR** — Standard Dimensional Ratio

NOTE: Volume of heat exchanger is approximately 1.0 gallon.

**Table 9 — Antifreeze Percentages by Volume**

ANTIFREEZE	MINIMUM TEMPERATURE FOR FREEZE PROTECTION (F)			
	10	15	20	25
Methanol (%)	25	21	16	10
100% USP Food Grade Propylene Glycol (%)	38	30	22	15

**Cooling Tower/Boiler Systems** — These systems typically use a common loop maintained at 60 to 90 F. The use of a closed circuit evaporative cooling tower with a secondary heat exchanger between the tower and the water loop is recommended. If an open type cooling tower is used continuously, chemical treatment and filtering will be necessary.

**Ground Coupled, Closed Loop and Plateframe Heat Exchanger Well Systems** — These systems allow water temperatures from 30 to 110 F. The external loop field is divided up into 2 in. polyethylene supply and return lines. Each line has valves connected in such a way that upon system start-up, each line can be isolated for flushing using only the system pumps. Air separation should be located in the piping system prior to the fluid re-entering the loop field.

## OPERATION

**Power Up Mode** — The unit will not operate until all the inputs, terminals and safety controls are checked for normal operation.

NOTE: The compressor will have a 5-minute anti-short cycle upon power up.

### Units with Aquazone™ Complete C Control

**STANDBY** — The Y and W terminals are not active in Standby mode, however the O and G terminals may be active, depending on the application. The compressor will be off.

**COOLING** — The Y and O terminals are active in Cooling mode. After power up, the first call to the compressor will initiate a 5 to 80 second random start delay and a 5-minute anti-short cycle protection time delay. After both delays are complete, the compressor is energized.

NOTE: On all subsequent compressor calls the random start delay is omitted.

**HEATING STAGE 1** — Terminal Y is active in heating Stage 1. After power up, the first call to the compressor will initiate a 5 to 80 second random start delay and a 5-minute anti-short cycle protection time delay. After both delays are complete, the compressor is energized.

NOTE: On all subsequent compressor calls the random start delay is omitted.

**HEATING STAGE 2** — To enter Stage 2 mode, terminal W is active (Y is already active). Also, the G terminal must be active or the W terminal is disregarded. The compressor relay will remain on and EH1 (emergency heat) is immediately turned on. EH2 will turn on after 10 minutes of continual Stage 2 demand.

NOTE: EH2 will not turn on (or if on, will turn off) if FP1 (freeze protection) temperature is greater than 45 F and FP2 is greater than 110 F.

**EMERGENCY HEAT** — In emergency heat (EH) mode, terminal W is active while terminal Y is not. Terminal G must be active or the W terminal is disregarded. EH1 is immediately turned on. EH2 will turn on after 5 minutes of continual emergency heat demand.

### Units with Aquazone Deluxe D Control

**STANDBY/FAN ONLY** — The compressor will be off. The fan enable, fan speed, and reversing valve (RV) relays will be on if inputs are present. If there is a Fan 1 demand, the fan enable will immediately turn on. If there is a Fan 2 demand, the fan enable and fan speed will immediately turn on.

NOTE: DIP switch 5 on S1 does not have an effect upon Fan 1 and Fan 2 outputs.

**HEATING STAGE 1** — In Heating Stage 1 mode, the fan enable and compressor relays are turned on immediately. Once the demand is removed, the relays are turned off and the control reverts to standby mode. If there is a master/slave or dual compressor application, all compressor relays and related functions will operate per their associated DIP switch 2 setting on S1.

**HEATING STAGE 2** — In Heating Stage 2 mode, the fan enable and compressor relays remain on. The fan speed relay is turned on immediately and turned off immediately once the demand is removed. The control reverts to Heating Stage 1 mode. If there is a master/slave or dual compressor application, all compressor relays and related functions will operate per their associated DIP switch 2 setting on S1.

**HEATING STAGE 3** — In Heating Stage 3 mode, the fan enable, fan speed and compressor relays remain on. The EH1 output is turned on immediately. With continuing Heat Stage 3 demand, EH2 will turn on after 10 minutes. EH1 and EH2 are turned off immediately when the Heating Stage 3 demand is removed. The control reverts to Heating Stage 2 mode.



Output EH2 will be off if FP1 is greater than 45 F and FP2 (when shorted) is greater than 110 F during Heating Stage 3 mode. This condition will have a 30-second recognition time. Also, during Heating Stage 3 mode, EH1, EH2, fan enable, and fan speed will be ON if G input is not active.

**EMERGENCY HEAT** — In emergency heat mode, the fan enable and fan speed relays are turned on. The EH1 output is turned on immediately. With continuing emergency heat demand, EH2 will turn on after 5 minutes. Fan enable and fan speed relays are turned off after a 60-second delay. The control reverts to standby mode.

Output EH1, EH2, fan enable, and fan speed will be ON if the G input is not active during emergency heat mode.

**COOLING STAGE 1** — In Cooling Stage 1 mode, the fan enable, compressor and RV relays are turned on immediately. If configured as stage 2 (DIP switch set to OFF) then the compressor and fan will not turn on until there is a stage 2 demand. The fan enable and compressor relays are turned off immediately when the Cooling Stage 1 demand is removed. The control reverts to standby mode. The RV relay remains on until there is a heating demand. If there is a master/slave or dual compressor application, all compressor relays and related functions will track with their associated DIP switch 2 on S1.

**COOLING STAGE 2** — In Cooling Stage 2 mode, the fan enable, compressor and RV relays remain on. The fan speed relay is turned on immediately and turned off once the Cooling Stage 2 demand is removed. The control reverts to Cooling Stage 1 mode. If there is a master/slave or dual compressor application, all compressor relays and related functions will track with their associated DIP switch 2 on S1.

**NIGHT LOW LIMIT (NLL) STAGED HEATING** — In NLL staged heating mode, the override (OVR) input becomes active and is recognized as a call for heating and the control will immediately go into a Heating Stage 1 mode. With an additional 30 minutes of NLL demand, the control will go into Heating Stage 2 mode. With another additional 30 minutes of NLL demand, the control will go into Heating Stage 3 mode.

## SYSTEM TEST

System testing provides the ability to check the control operation. The control enters a 20-minute Test mode by momentarily shorting the test pins. All time delays are increased 15 times. See Fig. 15.

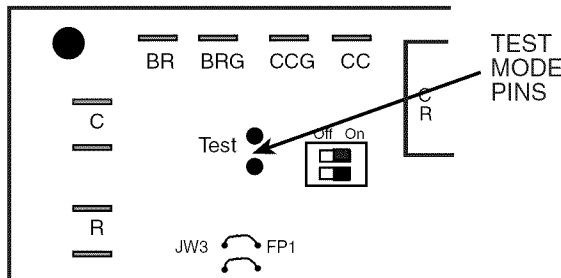


Fig. 15 — Test Mode Pins Location

**Test Mode** — To enter Test mode on Complete C or Deluxe D controls, cycle the power 3 times within 60 seconds. The LED (light-emitting diode) will flash a code representing the last fault when entering the Test mode. The alarm relay will also power on and off during Test mode. See Tables 10-12. To exit Test mode, short the terminals for 3 seconds or cycle the power 3 times within 60 seconds.

**NOTE:** Deluxe D control has a flashing code and alarm relay cycling code that will both have the same numerical label. For example, flashing code 1 will have an alarm relay cycling code 1. Code 1 indicates the control has not faulted since the last power off to power on sequence.

Table 10 — Complete C Control Current LED Status and Alarm Relay Operations

LED STATUS	DESCRIPTION OF OPERATION	ALARM RELAY
On	Normal Mode	Open
	Normal Mode with PM Warning	Cycle (Closed 5 sec., Open 25 sec.)
Off	Control is non-functional	Open
Slow Flash	Fault Retry	Open
	Over/Under Voltage Shutdown	Open (Closed after 15 minutes)
Fast Flash	Lockout	Closed
Flashing Code 1	Test Mode — No fault in memory	Cycling Code 1
Flashing Code 2	Test Mode — HP Fault in memory	Cycling Code 2
Flashing Code 3	Test Mode — LP Fault in memory	Cycling Code 3
Flashing Code 4	Test Mode — FP1 Fault in memory	Cycling Code 4
Flashing Code 5	Test Mode — FP2 Fault in memory	Cycling Code 5
Flashing Code 6	Test Mode — CO Fault in memory	Cycling Code 6
Flashing Code 7	Test Mode — Over/Under shutdown in memory	Cycling Code 7
Flashing Code 8	Test Mode — PM in memory	Cycling Code 8
Flashing Code 9	Test Mode — FP1/FP2 swapped fault in memory	Cycling Code 9

### LEGEND

CO	— Condensate Overflow
FP	— Freeze Protection
HP	— High Pressure
LED	— Light-Emitting Diode
LP	— Low Pressure
PM	— Performance Monitor

### NOTES:

1. Slow flash is 1 flash every 2 seconds.
2. Fast flash is 2 flashes every 1 second.
3. EXAMPLE: "Flashing Code 2" is represented by 2 fast flashes followed by a 10-second pause. This sequence will repeat continually until the fault is cleared.

Table 11 — Complete C Control LED Code and Fault Descriptions

LED CODE	FAULT	DESCRIPTION
1	No fault in memory	There has been no fault since the last power-down to power-up sequence
2	High-Pressure Switch	HP Open Instantly
3	Low-Pressure Switch	LP open for 30 continuous seconds before or during a call (bypassed for first 60 seconds)
4	Freeze Protection Coax — FP1	FP1 below Temp limit for 30 continuous seconds (bypassed for first 60 seconds of operation)
5	Freeze Protection Air Coil — FP2	FP2 below Temp limit for 30 continuous seconds (bypassed for first 60 seconds of operation)
6	Condensate overflow	Sense overflow (grounded) for 30 continuous seconds
7 (Autoreset)	Over/Under Voltage Shutdown	"R" power supply is <19 vac or >30 vac
8	PM Warning	Performance Monitor Warning has occurred.
9	FPI and FP2 Thermistors are swapped	FP1 temperature is higher than FP2 in heating/test mode, or FP2 temperature is higher than FP1 in cooling/test mode.

### LEGEND

FP	— Freeze Protection
HP	— High Pressure
LP	— Low Pressure



**Table 12 — Aquazone™ Deluxe D Control Current LED Status and Alarm Relay Operations**

DESCRIPTION	STATUS LED (Green)	TEST LED (Yellow)	FAULT LED (Red)	ALARM RELAY
Normal Mode	On	Off	Flash Last Fault Code in Memory	Open
Normal Mode with PM	On	Off	Flashing Code 8	Cycle (closed 5 sec, open 25 sec, ...)
Control is Non-Functional	Off	Off	Off	Open
Test Mode	—	On	Flash Last Fault Code in Memory	Cycling Appropriate Code
Night Setback	Flashing Code 2	—	Flash Last Fault Code in Memory	—
ESD	Flashing Code 3	—	Flash Last Fault Code in Memory	—
Invalid T-stat Inputs	Flashing Code 4	—	Flash Last Fault Code in Memory	—
No Fault in Memory	On	Off	Flashing Code 1	Open
HP Fault	Slow Flash	Off	Flashing Code 2	Open
LP Fault	Slow Flash	Off	Flashing Code 3	Open
FP1 Fault	Slow Flash	Off	Flashing Code 4	Open
FP2 Fault	Slow Flash	Off	Flashing Code 5	Open
CO Fault	Slow Flash	Off	Flashing Code 6	Open
Over/Under Voltage	Slow Flash	Off	Flashing Code 7	Open (closed after 15 minutes)
HP Lockout	Fast Flash	Off	Flashing Code 2	Closed
LP Lockout	Fast Flash	Off	Flashing Code 3	Closed
FP1 Lockout	Fast Flash	Off	Flashing Code 4	Closed
FP2 Lockout	Fast Flash	Off	Flashing Code 5	Closed
CO Lockout	Fast Flash	Off	Flashing Code 6	Closed

**LEGEND**

**CO** — Condensate Overflow  
**ESD** — Emergency Shutdown  
**FP** — Freeze Protection  
**HP** — High Pressure  
**LP** — Low Pressure  
**PM** — Performance Monitor

**NOTES:**

1. If there is no fault in memory, the Fault LED will flash code 1.
2. Codes will be displayed with a 10-second Fault LED pause.
3. Slow flash is 1 flash every 2 seconds.
4. Fast flash is 2 flashes every 1 second.
5. EXAMPLE: "Flashing Code 2" is represented by 2 fast flashes followed by a 10-second pause. This sequence will repeat continually until the fault is cleared.

**Retry Mode** — In Retry mode, the status LED will start to flash slowly to signal that the control is trying to recover from an input fault. The control will stage off the outputs and try to again satisfy the thermostat used at terminal Y. Once the thermostat input calls are satisfied, the control will continue normal operation.

**NOTE:** If 3 consecutive faults occur without satisfying the thermostat input call to terminal Y, the control will go into lockout mode. The last fault causing the lockout is stored in memory and can be viewed by entering Test mode.

**Aquazone™ Deluxe D Control LED Indicators** — There are 3 LED indicators on the Deluxe D control:

**STATUS LED** — Status LED indicates the current status or mode of the Deluxe D control. The Status LED light is green.

**TEST LED** — Test LED will be activated any time the Deluxe D control is in Test mode. The Test LED light is yellow.

**FAULT LED** — Fault LED light is red. The fault LED will always flash a code representing the last fault in memory. If there is no fault in memory, the fault LED will flash code 1 on the display and appear as 1 fast flash alternating with a 10-second pause. See Table 12.

**SERVICE**

Perform the procedures outlined below periodically, as indicated.

**IMPORTANT:** When a compressor is removed from this unit, system refrigerant circuit oil will remain in the compressor. To avoid leakage of compressor oil, the refrigerant lines of the compressor must be sealed after it is removed.

**IMPORTANT:** To avoid the release of refrigerant into the atmosphere, the refrigerant circuit of this unit must only be serviced by technicians which meet local, state and federal proficiency requirements.

**IMPORTANT:** All refrigerant discharged from this unit must be recovered without exception. Technicians must follow industry accepted guidelines and all local, state and federal statutes for the recovery and disposal of refrigerants.

**⚠ WARNING**

To prevent injury or death due to electrical shock or contact with moving parts, open unit disconnect switch before servicing unit.

**Water Coil** — Keep all air out of the water coil. Check open loop systems to be sure the well head is not allowing air to infiltrate the water line. Always keep lines airtight.

Inspect heat exchangers regularly, and clean more frequently if the unit is located in a "dirty" environment. The heat exchanger should be kept full of water at all times. Open loop systems should have an inverted P trap placed in the discharge line to keep water in the heat exchanger during off cycles. Closed loop systems must have a minimum of 15 psig during the summer and 40 psig during the winter.

Check P trap frequently for proper operation.

**⚠ CAUTION**

To avoid fouled machinery and extensive unit clean-up, DO NOT operate units without filters in place. DO NOT use equipment as a temporary heat source during construction.

**Refrigerant System** — Verify air and water flow rates are at proper levels before servicing. To maintain sealed circuitry integrity, do not install service gages unless unit operation appears abnormal.

**Condenser Cleaning** — Water-cooled condensers may require cleaning of scale (water deposits) due to improperly maintained closed-loop water systems. Sludge build-up may



need to be cleaned in an open water tower system due to induced contaminants.

Local water conditions may cause excessive fouling or pitting of tubes. Condenser tubes should therefore be cleaned at least once a year, or more often if the water is contaminated.

Proper water treatment can minimize tube fouling and pitting. If such conditions are anticipated, water treatment analysis is recommended. Refer to the Carrier System Design Manual, Part 5, for general water conditioning information.

### ⚠ CAUTION


Follow all safety codes. Wear safety glasses and rubber gloves when using inhibited hydrochloric acid solution. Observe and follow acid manufacturer's instructions.

Clean condensers with an inhibited hydrochloric acid solution. The acid can stain hands and clothing, damage concrete, and, without inhibitor, damage steel. Cover surroundings to guard against splashing. Vapors from vent pipe are not harmful, but take care to prevent liquid from being carried over by the gases.

Warm solution acts faster, but cold solution is just as effective if applied for a longer period.


**GRAVITY FLOW METHOD** — Do not add solution faster than vent can exhaust the generated gases.

When condenser is full, allow solution to remain overnight, then drain condenser and flush with clean water. Follow acid manufacturer's instructions. See Fig. 16.

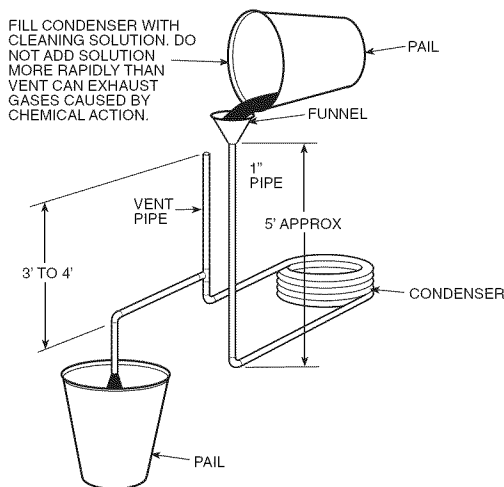

**Fig. 16 — Gravity Flow Method**

**FORCED CIRCULATION METHOD** — Fully open vent pipe when filling condenser. The vent may be closed when condenser is full and pump is operating. See Fig. 17.

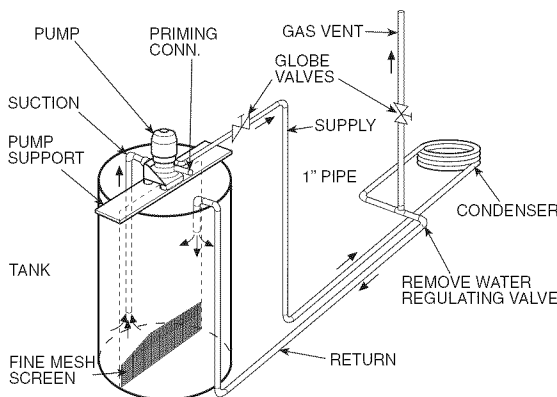

**Fig. 17 — Forced Circulation Method**

Regulate flow to condenser with a supply line valve. If pump is a nonoverloading type, the valve may be fully closed while pump is running.

For average scale deposit, allow solution to remain in condenser overnight. For heavy scale deposit, allow 24 hours. Drain condenser and flush with clean water. Follow acid manufacturer's instructions.

**Checking System Charge** — Units are shipped with full operating charge. If recharging is necessary:

1. Insert thermometer bulb in insulating rubber sleeve on liquid line near filter drier. Use a digital thermometer for all temperature measurements. DO NOT use a mercury or dial-type thermometer.
2. Connect pressure gage to discharge line near compressor.
3. After unit conditions have stabilized, read head pressure on discharge line gage.

NOTE: Operate unit a minimum of 15 minutes before checking charge. From standard field-supplied Pressure-Temperature chart for R-410A, find equivalent saturated condensing temperature.

4. Read liquid line temperature on thermometer; then subtract from saturated condensing temperature. The difference equals subcooling temperature.

## Refrigerant Charging

### ⚠ WARNING

To prevent personal injury, wear safety glasses and gloves when handling refrigerant. Do not overcharge system — this can cause compressor flooding.

NOTE: Do not vent or depressurize unit refrigerant to atmosphere. Remove and recover refrigerant following accepted practices.

## Air Coil Fan Motor Removal

### ⚠ CAUTION

Before attempting to remove fan motors or motor mounts, place a piece of plywood over evaporator coils to prevent coil damage.

Motor power wires need to be disconnected from motor terminals before motor is removed from unit.

1. Shut off unit main power supply.
2. Loosen bolts on mounting bracket so that fan belt can be removed.
3. Loosen and remove the 2 motor mounting bracket bolts on left side of bracket.
4. Slide motor/bracket assembly to extreme right and lift out through space between fan scroll and side frame. Rest motor on a high platform such as a step ladder. Do not allow motor to hang by its power wires.

## TROUBLESHOOTING

When troubleshooting problems with a WSHP, refer to Table 13.



**Table 13 — Troubleshooting**

FAULT	HEATING	COOLING	POSSIBLE CAUSE	SOLUTION
Main Power Problems	X	X	Green Status LED Off	Check line voltage circuit breaker and disconnect.
				Check for line voltage between L1 and L2 on the contactor.
				Check for 24-vac between R and C on controller.
				Check primary/secondary voltage on transformer.
HP Fault — Code 2 High Pressure		X	Reduced or no water flow in cooling	Check pump operation or valve operation/setting. Check water flow adjust to proper flow rate.
		X	Water temperature out of range in cooling	Bring water temperature within design parameters.
	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Dirty air coil — construction dust, etc. Perform preventive maintenance; Clean air coil.
				High external static. Check duct design and downstream interference.
	X		Air temperature out of range in heating	Bring return-air temperature within design parameters.
LP/LOC Fault — Code 3 Low Pressure/Loss of Charge	X	X	Overcharged with refrigerant	Check superheat/subcooling vs. typical operating condition.
	X	X	Bad HP switch	Check switch continuity and operation. Replace.
	X	X	Insufficient charge	Check for refrigerant leaks.
	X		Compressor pump down at start-up	Check charge and start-up water flow.
FP1 Fault — Code 4 Water Freeze Protection	X		Reduced or no water flow in heating	Check pump operation or water valve operation/setting. Plugged strainer or filter. Clean or replace. Check water flow adjust to proper flow rate.
				Check antifreeze density with hydrometer.
				Clip JW3 jumper for antifreeze (10 F) use.
	X		Inadequate antifreeze level	Check antifreeze density with hydrometer.
	X		Improper freeze protect setting (30 F vs 10 F)	Clip JW3 jumper for antifreeze (10 F) use.
	X		Water temperature out of range	Bring water temperature within design parameters.
FP2 Fault — Code 5 Air Coil Freeze Protection		X	Bad thermistor	Check temperature and impedance correlation.
		X	Reduced or no airflow in cooling	Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. High external static. Check duct design and downstream interference.
				Too much cold vent air. Bring entering-air temperature within design parameters.
		X	Air temperature out of range	Normal airside applications will require 30 F only.
	X	X	Improper freeze protect setting (30 F vs. 10 F)	Check temperature and impedance correlation.
Condensate Fault — Code 6	X	X	Blocked drain	Check for blockage and clean drain.
	X	X	Improper trap	Check trap dimensions and location ahead of vent.
		X	Poor drainage	Check for piping slope away from unit. Check slope of unit toward outlet. Poor venting. Check vent location.
				Check for moisture shorting to air coil.
		X	Moisture on sensor	Check for moisture shorting to air coil.
Over/Under Voltage — Code 7 (Auto Resetting)	X	X	Under voltage	Check power supply and 24-vac voltage before and during operation. Check power supply wire size. Check compressor starting. Check 24-vac and unit transformer tap for correct power supply voltage.
				Check power supply voltage and 24-vac before and during operation.
				Check 24-vac and unit transformer tap for correct power supply voltage.
				Check power supply voltage and 24-vac before and during operation.
Performance Monitor — Code 8	X		Heating mode FP2>125 F	Check for poor airflow or overcharged unit.
		X	Cooling mode FP1>125 F OR FP2< 40 F	Check for poor water flow or airflow.
No Fault Code Shown	X	X	No compressor operation	See scroll compressor rotation section.
	X	X	Compressor overload	Check and replace if necessary.
	X	X	Control board	Reset power and check operation.
Unit Short Cycles	X	X	Dirty air filter	Check and clean air filter.
	X	X	Unit in Test mode	Reset power or wait 20 minutes for auto exit.
	X	X	Unit selection	Unit may be oversized for space. Check sizing for actual load of space.
	X	X	Compressor overload	Check and replace if necessary.
Only Fan Runs	X	X	Thermostat position	Ensure thermostat set for heating or cooling operation.
	X	X	Unit locked out	Check for lockout codes. Reset power.
	X	X	Compressor overload	Check compressor overload. Replace if necessary.
	X	X	Thermostat wiring	Check Y and W wiring at heat pump. Jumper Y and R for compressor operation in Test mode.

LEGEND

BR — Blower Relay  
 FP — Freeze Protection  
 HP — High Pressure  
 LED — Light-Emitting Diode  
 LOC — Loss of Charge  
 LP — Low Pressure  
 RV — Reversing Valve



**Table 13 — Troubleshooting (cont)**

FAULT	HEATING	COOLING	POSSIBLE CAUSE	SOLUTION
<b>Only Compressor Runs</b>	X	X	Thermostat wiring	Check G wiring at heat pump. Jumper G and R for fan operation.
	X	X	Fan motor relay	Jumper G and R for fan operation. Check for line voltage across BR contacts. Check fan power enable relay operation (if present).
	X	X	Fan motor	Check for line voltage at motor. Check capacitor.
	X	X	Thermostat wiring	Check Y and W wiring at heat pump. Jumper Y and R for compressor operation in Test mode.
<b>Unit Does Not Operate in Cooling</b>		X	Reversing valve	Set for cooling demand and check 24-vac on RV coil and at control. If RV is stuck, run high pressure up by reducing water flow and while operating engage and disengage RV coil voltage to push valve.
		X	Thermostat setup	Check for 'O' RV setup not 'B'.
		X	Thermostat wiring	Check O wiring at heat pump. Jumper O and R for RV coil.
<b>Insufficient Capacity/ Not Cooling or Heating Properly</b>	X	X	Dirty filter	Replace or clean.
	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. High external static. Check duct design and downstream interference.
		X	Reduced or no airflow in cooling	Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. High external static. Check duct design and downstream interference.
	X	X	Leaky ductwork	Check supply and return air temperatures at the unit and at distant duct registers if significantly different, duct leaks are present.
	X	X	Low refrigerant charge	Check superheat and subcooling.
	X	X	Restricted metering device	Check superheat and subcooling. Replace.
		X	Defective reversing valve	Perform RV touch test.
	X	X	Thermostat improperly located	Check location and for air drafts behind thermostat.
	X	X	Unit undersized	Recheck loads and sizing. Check sensible cooling load and heat pump capacity.
	X	X	Scaling in water heat exchanger	Perform scaling check and clean if necessary.
	X	X	Inlet water too hot or cold	Check load, loop sizing, loop backfill, ground moisture.
<b>High Head Pressure</b>	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. High external static. Check duct design and downstream interference.
		X	Reduced or no water flow in cooling	Check pump operation or valve operation/setting. Check water flow. Adjust to proper flow rate.
		X	Inlet water too hot	Check load, loop sizing, loop backfill, ground moisture.
	X		Air temperature out of range in heating	Bring return air temperature within design parameters.
		X	Scaling in water heat exchanger	Perform scaling check and clean if necessary.
	X	X	Unit overcharged	Check superheat and subcooling. Reweigh in charge.
	X	X	Non-condensables in system	Vacuum system and reweigh in charge.
	X	X	Restricted metering device	Check superheat and subcooling. Replace.
<b>Low Suction Pressure</b>	X		Reduced water flow in heating	Check pump operation or water valve operation/setting. Plugged strainer or filter. Clean or replace. Check water flow adjust to proper flow rate.
	X		Water temperature out of range	Bring water temperature within design parameters.
		X	Reduced airflow in cooling	Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. High external static. Check duct design and downstream interference.
		X	Air temperature out of range	Too much cold vent air. Bring entering air temperature within design parameters.
	X	X	Insufficient charge	Check for refrigerant leaks.
<b>Low Discharge Air Temperature in Heating</b>	X		Too high airflow	Check blower.
	X		Poor performance	See 'Insufficient Capacity' above.
<b>High Humidity</b>		X	Too high airflow	Check blower.
		X	Unit oversized	Recheck loads and sizing. Check sensible cooling load and heat pump capacity.

LEGEND

**BR** — Blower Relay  
**FP** — Freeze Protection  
**HP** — High Pressure  
**LED** — Light-Emitting Diode  
**LOC** — Loss of Charge  
**LP** — Low Pressure  
**RV** — Reversing Valve







**50PSW  
START-UP CHECKLIST**

CUSTOMER: \_\_\_\_\_ JOB NAME: \_\_\_\_\_  
MODEL NO.: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_ DATE: \_\_\_\_\_  
LOOP TYPE: \_\_\_\_\_ ANTIFREEZE TYPE AND %: \_\_\_\_\_

**I. PRE-START-UP**

DOES THE UNIT VOLTAGE CORRESPOND WITH THE SUPPLY VOLTAGE AVAILABLE? (Y/N) \_\_\_\_\_

HAVE THE POWER AND CONTROL WIRING CONNECTIONS BEEN MADE AND TERMINALS TIGHT? (Y/N) \_\_\_\_\_

HAVE WATER CONNECTIONS BEEN MADE AND IS FLUID AVAILABLE AT HEAT EXCHANGER? (Y/N) \_\_\_\_\_

HAS PUMP BEEN TURNED ON AND ARE ISOLATION VALVES OPEN? (Y/N) \_\_\_\_\_

HAS CONDENSATE CONNECTION BEEN MADE AND IS A TRAP INSTALLED? (Y/N) \_\_\_\_\_

IS AN AIR FILTER INSTALLED? (Y/N) \_\_\_\_\_

**II. START-UP**

IS FAN OPERATING WHEN COMPRESSOR OPERATES? (Y/N) \_\_\_\_\_

IF 3-PHASE SCROLL COMPRESSOR IS PRESENT, VERIFY PROPER ROTATION PER INSTRUCTIONS. (Y/N) \_\_\_\_\_

**UNIT VOLTAGE — COOLING OPERATION**

PHASE AB VOLTS \_\_\_\_\_ PHASE BC VOLTS \_\_\_\_\_ PHASE CA VOLTS \_\_\_\_\_  
(if 3 phase) (if 3 phase) (if 3 phase)

PHASE AB AMPS \_\_\_\_\_ PHASE BC AMPS \_\_\_\_\_ PHASE CA AMPS \_\_\_\_\_  
(if 3 phase) (if 3 phase) (if 3 phase)

**CONTROL VOLTAGE**

IS CONTROL VOLTAGE ABOVE 21.6 VOLTS? (Y/N) \_\_\_\_\_.

IF NOT, CHECK FOR PROPER TRANSFORMER CONNECTION.


**TEMPERATURES**

FILL IN THE ANALYSIS CHART ATTACHED.

COAXIAL HEAT EXCHANGER	COOLING CYCLE:						
	FLUID IN	_____ F	FLUID OUT	_____ F	_____ PSI	_____ FLOW	
AIR COIL	HEATING CYCLE:						
	FLUID IN	_____ F	FLUID OUT	_____ F	_____ PSI	_____ FLOW	
	COOLING CYCLE:						
	AIR IN	_____ F	AIR OUT	_____ F			
	HEATING CYCLE:						
	AIR IN	_____ F	AIR OUT	_____ F			



HEATING AND COOLING CYCLE ANALYSIS

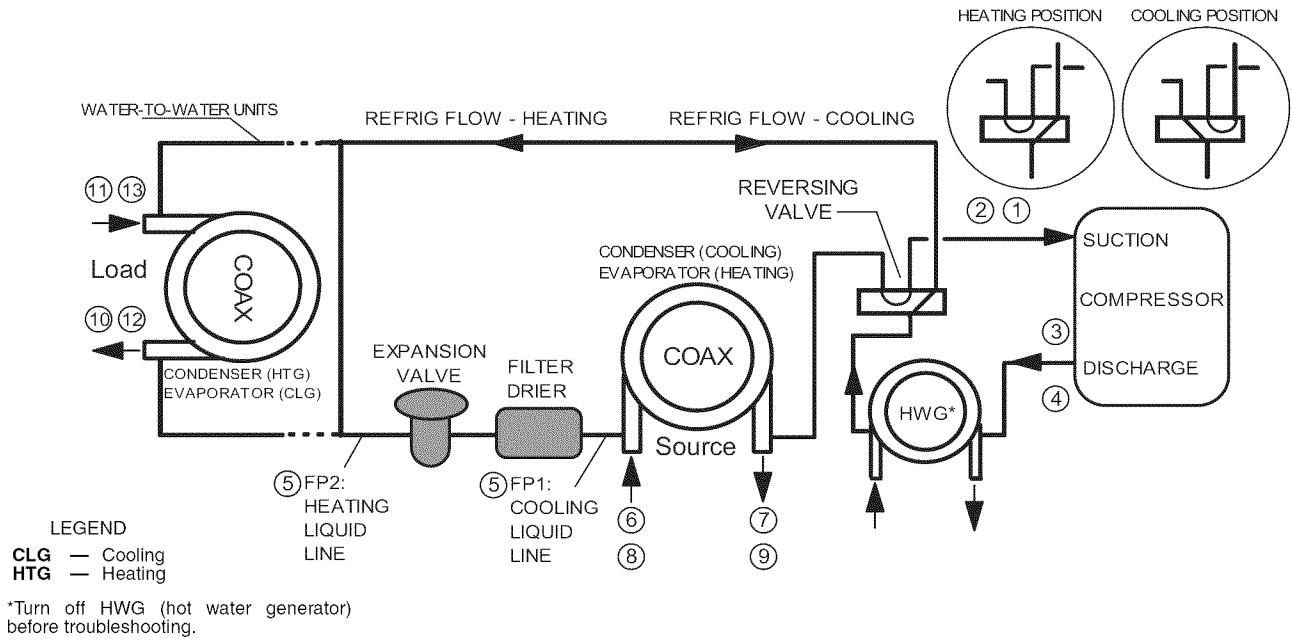

DESCRIPTION		HEATING	COOLING	NOTES
	Voltage			
	Compressor Amp			
1	Suction Temperature			
2	Suction Pressure			
2a	Saturation Temperature			
2b	Superheat			
3	Discharge Temperature			
4	Discharge Pressure			
4a	Saturation Temperature			
4b	Subcooling			
5	Liquid Line Temperature			
6	Source Water In Temperature			
7	Source Water Out Temperature			Temperature Difference —
8	Source Water In Pressure			
9	Source Water Out Pressure			
9a	Pressure Drop			
9b	Flow Rate (gpm)			
10	Load Water In Temperature			
11	Load Water Out Temperature			Temperature Difference —
12	Load Water In Pressure			
13	Load Water Out Pressure			
13a	Pressure Drop			
13b	Flow Rate (gpm)			

HEAT OF EXTRACTION (ABSORPTION) OR HEAT OF REJECTION =

\_\_\_\_\_ FLOW RATE (GPM) x \_\_\_\_\_ TEMP. DIFF. (DEG. F) x \_\_\_\_\_ FLUID FACTOR\* = \_\_\_\_\_ (Btu/hr)

SUPERHEAT = SUCTION TEMPERATURE – SUCTION SATURATION TEMPERATURE

= \_\_\_\_\_ (DEG F)

SUBCOOLING = DISCHARGE SATURATION TEMPERATURE – LIQUID LINE TEMPERATURE

= \_\_\_\_\_ (DEG F)

\*Use 500 for water, 485 for antifreeze.

97B0063N02